

INSTALLATIEHANDLEIDING EN GEBRUIKERSHANDLEIDING (NL)

INSTALLATION MANUAL AND USER MANUAL (EN)

Global
F I R E S

GLOBAL 70XT CF RCE



***Lees en bewaar dit document zorgvuldig
Read this document and store it carefully***



**DRU VERWARMING B.V.
HOLLAND**



957.657.07



Inhoudsopgave

Woord vooraf	2	6.7 Plaatsen hout-/kiezelset.....	6
1. Inleiding	2	6.8 Ruit	6
2. CE verklaring	2	7. Draadloze afstandsbediening	7
3. Veiligheid	2	7.1 Aansluiten ontvanger	7
3.1 Algemeen	2	7.2 Instellen communicatiecode	8
3.2 Voorschriften	3	7.3 Vervangen ontvanger.....	8
3.3 Voorzorgsmaatregelen / veiligheidsinstructies bij installatie.....	3	8. Eindcontrole	8
3.4 Oxypilot beveiliging	3	8.1 Gasdichtheid	8
4. Aanwijzingen	3	8.2 Gasdruk / voordruk.....	8
5. Uitpakken	3	8.3 Ontsteking waakvlambrander en hoofdbrander	8
6. Installatie	4	8.4 Vlambeeld	9
6.1 Voorschriften	4	9. Onderhoud	9
6.2 Gassoort.....	4	9.1 Onderdelen	10
6.3 Gasaansluiting	4	10. Oplevering	10
6.4 Plaatsen toestel	4	11. Storingen	11
6.5 Verbrandingsgasafvoersysteem	5	Bijlage 1 Meegeleverde onderdelen	14
6.6 Plaatsen boezem.....	5	Bijlage 2 Technische gegevens	15
		Bijlage 3 Afbeeldingen	44

Woord vooraf

Als fabrikant van gasverwarmingstoestellen ontwikkelt en produceert DRU producten volgens de hoogst mogelijke kwaliteits-, prestatie- en veiligheidseisen.

De gebruiker kan hierdoor rekenen op jarenlang gebruiksgenot.

Dit toestel heeft een CE merk; het voldoet daarmee aan de essentiële eisen van de Europese Gastoestellenrichtlijn.

Bij het toestel worden twee handleidingen geleverd: de installatiehandleiding en de gebruikershandleiding.

Deze zijn in één boekje samengevoegd.

Daarnaast zijn 2 boekjes toegevoegd die bestemd zijn voor het Verenigd Koninkrijk, de 'Concise installation guide' en 'Fitting into a conventional class I chimney'.

Als installateur dient u vakbekwaam te zijn op het gebied van gas sfeerverwarming.

De installatiehandleiding geeft u de informatie die u nodig hebt om het toestel zo te installeren dat het goed en veilig functioneert.

Deze handleiding schenkt aandacht aan de installatie van het toestel en de daarbij geldende voorschriften. Daarnaast treft u technische gegevens van het toestel aan en informatie over onderhoud, eventueel optredende storingen en de mogelijke oorzaak hiervan.

De afbeeldingen zijn achterin dit boekje opgenomen (Bijlage 3).

U dient deze installatiehandleiding zorgvuldig te lezen en te gebruiken.

In de handleidingen worden de volgende markeringen gebruikt om belangrijke informatie aan te geven:

- Uit te voeren acties.

! Tip Suggesties en adviezen.

! Let op Deze instructies zijn noodzakelijk ter voorkoming van mogelijke problemen bij installatie en/of gebruik.



Let op Deze instructies zijn noodzakelijk ter voorkoming van brand, persoonlijk letsel of andere ernstige schade.

Na oplevering dient u dit boekje met handleidingen te overhandigen aan de gebruiker.

1. Inleiding

Global 70XT CF is een open gas sfeerverwarmingstoestel. Een open toestel onttrekt de verbrandingslucht aan de leefomgeving. De leefomgeving dient voldoende geventileerd te worden om het toestel van verbrandingslucht te voorzien. Om de veilige werking van het toestel te garanderen is een oxypilot beveiliging aangebracht. Bij onvoldoende luchttoevoer grijpt de oxypilot in en wordt het toestel uitgeschakeld.

Global 70XT CF is geschikt voor inbouw in een nieuw te plaatsen boezem of bestaande schouw/stookplaats. In een bestaand schoorsteenkanaal (anders dan de class I chimney in de UK) wordt een flexibele RVS pijp aanbevolen voor de afvoer van de verbrandingsgassen. Deze handleiding beschrijft de inbouw van het toestel in een boezem. Bij

inbouw in een schouw/stookplaats aangesloten op een bestaand schoorsteenkanaal in het Verenigd Koninkrijk (class I chimney), is de los meegeleverde Engelse beschrijving 'Fitting into a conventional class I chimney' mede van toepassing.

Het toestel moet strak ingebouwd worden met behulp van een stucijst of rondom voorzien worden van een sierlijst of front. Deze onderdelen worden niet standaard bij het toestel geleverd maar zijn op aanvraag verkrijgbaar. De installatie instructies zijn bij het betreffende onderdeel bijgevoegd.

In de meeste gevallen moet de boezem geventileerd worden voor een goede afvoer van de warmte (zie hoofdstuk 6.6). DRU kan verschillende ventilatie-elementen leveren. De toestellen worden geleverd met een draadloze afstandsbediening; deze werkt op batterijen.

2. CE verklaring

Door bedrijfsinterne maatregelen is gewaarborgd dat door DRU geproduceerde toestellen aan de essentiële eisen van de verordening betreffende gasverbrandingstoestellen en daarbij toegepaste normen voldoen. Deze verklaring verliest haar geldigheid als zonder schriftelijke toestemming van DRU wijzigingen aan het toestel worden aangebracht. Een kopie van het CE keuringscertificaat is te downloaden via www.druservice.com.

Product: Gas sfeerverwarmingstoestel

Type: Global 70XT CF RCE

Van toepassing zijnde EG- verordening: 2016/426/EU

Toegepaste geharmoniseerde normen: NEN-EN-613; NEN-EN-613/A1

Conformiteitsbeoordelingsinstantie: Kiwa 0063

R.P. Zantinge
General Manager
Postbus 1021, 6920 BA Duiven
Ratio 8, 6921 RW Duiven
www.drufire.com

3. Veiligheid

3.1 Algemeen



Let op

- Leest u dit hoofdstuk over veiligheid zorgvuldig door voordat u begint met installatie of onderhoud;
- Houdt u zich aan de algemeen geldende voorschriften en de voorzorgsmaatregelen/veiligheidsinstructies in deze handleiding.

3.2 Voorschriften

Installeer het toestel volgens de geldende nationale, lokale en bouwkundige (installatie)voorschriften.

Voor Nederland geldt onder meer het Bouwbesluit.

3.3 Voorzorgsmaatregelen / veiligheidsinstructies bij installatie

Volg de onderstaande voorzorgsmaatregelen/veiligheidsvoorschriften nauwkeurig op:

- Installatie en onderhoud van het toestel dienen door een professioneel gecertificeerd vakman te worden uitgevoerd welke over bewezen kennis en aantoonbare bekwaamheid beschikt. Een professionele vakman houdt rekening met alle technische aspecten zoals warmte afgifte, gasaansluiting en met verbrandingsgasafvoer vereisten. Daar waar het installatievoorschrift niet duidelijk is dient de nationale/lokale regelgeving te worden gevolgd.
- breng geen wijzigingen aan het toestel aan;
- gebruik onbrandbaar en hittebestendig materiaal voor de boezem inclusief de bovenkant van de boezem, het materiaal in de boezem en de achterwand waartegen het toestel wordt geplaatst;
- neem afdoende maatregelen om te hoge temperaturen van een wand achter de boezem te voorkomen, inclusief de materialen en/of voorwerpen die zich achter de wand bevinden;
- houd rekening met de minimaal vereiste inwendige afmetingen van de boezem;
- ventileer de boezem door middel van ventilatieopeningen met een gezamenlijke doorlaat van minimaal 200 cm²;
- gebruik een geschikt verbrandingsgasafvoersysteem dat voorzien is van het CE-merk;
- houd minimaal 10 mm afstand tussen het toestel en de achterwand;
- plaats het toestel op steunen van onbrandbaar en hittebestendig materiaal;
- dek het toestel niet af en/of pak het niet in met een isolatiedeken of enig ander materiaal;
- houd brandbare objecten en/of materialen op minimaal 500 mm afstand van het toestel;
- Het toestel is ontworpen voor sfeer- en verwarmingsdoeleinden. Dit houdt in dat alle zichtbare oppervlaktes, inclusief de ruit heter dan 100 °C kunnen worden. Het is aan te bevelen altijd een afschermrooster voor het toestel te plaatsen als er kinderen, bejaarden of mindervaliden in dezelfde ruimte als het toestel aanwezig zijn. Indien regelmatig kwetsbare personen zonder toezicht in de ruimte aanwezig kunnen zijn, dient een vaste afscherming rondom het toestel te worden gemonteerd.
- gebruik uitsluitend de meegeleverde houtset;
- plaats de houtset exact volgens de beschrijving;
- laat de waakvlambrander en de ruimte er omheen vrij;
- zorg ervoor dat er geen vuil in de gasleidingen en aansluitingen zit;
- plaats een gaskraan direct naast het toestel;
- controleer de aansluitingen op gasdichtheid vóór ingebruikname;
- vervang een gescheurde of gebroken ruit;

- bij een gebroken of gescheurde ruit het toestel niet gebruiken en gaskraan sluiten;
- verwijder het plakband op de convectiekast voordat u het toestel ontsteekt;
- ontsteek het toestel niet voordat het volledig is geïnstalleerd.

3.4 Oxypilot beveiliging

Het toestel is uitgerust met een oxypilot beveiliging, die ingrijpt als er onvoldoende verbrandingslucht (zuurstof) wordt aangeleverd.

Als de oxypilot beveiliging onvoldoende zuurstof signaleert, wordt de waakvlam uitgeschakeld en de gastoevoer naar de brander afgesloten.

Als de aanvoer van verbrandingslucht weer voldoende is, kan het toestel opnieuw gestart worden.

De toevoer van verse lucht kan geregeld worden door ventilatieopeningen aan te brengen/open te zetten.

!Let op

Bij installatie in een woning met een mechanisch luchtafzuigsysteem en/of een open keuken met afzuigkap is een permanente ventilatieopening nodig in de omgeving van het toestel; zie voor deze toepassing de gasinstallatievoorschriften en de lokale regelgeving.

4. Aanwijzingen

Houd bij het installeren rekening met de onderstaande punten voor een goede en veilige werking van het toestel:

- werk de randen bij strakke inbouw goed af;
- stuc niet op of over de flenzen;
- voorkom beschadiging van de ruit bij het verwijderen/plaatsen;
- maak de ruit schoon vóór ingebruikname ter voorkoming van inbranden van vuil.

5. Uitpakken

Schenk aandacht aan de onderstaande punten bij het uitpakken:

!Let op

Laat het toestel niet op de onderbak rusten (zie afb. 3)

- Controleer het toestel met toebehoren op transportschade.
- Neem zonodig contact op met DRU Service.

Na het verwijderen van het verpakkingsmateriaal, dient u over de volgende componenten te beschikken:

- Inbussleutel; deze ligt boven op het toestel;
- Plastic zak met onderdelen;
- Houtset;
- Stucijst/sierlijst/front; op verzoek is de stucijst, de sierlijst of het front meegeleverd.



Let op Houd plastic zakken bij kinderen vandaan.

In Bijlage 1 / Tabel 2 staat vermeld over welke onderdelen u na het uitpakken dient te beschikken.

- Neem contact op met DRU Service als u na het uitpakken niet over alle onderdelen beschikt.
- Voer de verpakking af via de reguliere weg.

6. Installatie

Lees de handleiding zorgvuldig door voor een goede en veilige werking van het toestel.

!Let op Installeer het toestel in de volgorde zoals in dit hoofdstuk is beschreven.

6.1 Voorschriften

- Houdt u zich aan de geldende (installatie)voorschriften.
- Houdt u zich aan de voorschriften/instructies zoals vermeld in deze handleiding.

6.2 Gassoort

Op het typeplaatje staat vermeld voor welke gassoort, gasdruk en voor welk land dit toestel is bestemd. Het typeplaatje zit vast aan een ketting en ligt in de lichtspleet aan de linkerzijde van het toestel. Het dient aan de ketting bevestigd te blijven.



Let op Controleer of het toestel geschikt is voor de gassoort en gasdruk ter plaatse.

6.3 Gasaansluiting

In de gasaansluiting dient een gaskraan geplaatst te worden in de omgeving van het toestel.



Let op

- Zorg ervoor dat er geen vuil in de gasleidingen en aansluitingen zit;
- Vermijd verdraaien van de gaskraan bij het aansluiten van de gasleiding.

Voor de gasaansluiting gelden de volgende eisen:

- dimensioneer de gasleiding zodanig dat geen drukverlies kan optreden;
- de gaskraan heeft het CE merk;
- de gaskraan is altijd bereikbaar.

6.4 Plaatsen toestel

Voor een aansluiting op een bestaand schoorsteenkanaal (anders dan de class I chimney in het Verenigd Koninkrijk) wordt een flexibele RVS pijp aanbevolen voor de afvoer van de verbrandingsgassen. Bij inbouw in een schouw/stookplaats aangesloten op een bestaand schoorsteenkanaal in het Verenigd Koninkrijk (class I chimney), is de los meegeleverde Engelse beschrijving 'Fitting into a conventional class I chimney' mede van toepassing. Dit boekje bevat naast de installatie instructies ook aanvullende testen.

In het Verenigd Koninkrijk is ook de 'Concise installation guide' van toepassing.



- Let op**
- Houd brandbare objecten en/of materialen op minimaal 500 mm afstand van het toestel;
 - Plaats het toestel tegen een wand van onbrandbaar en hittebestendig materiaal;
 - Houd minimaal 10 mm afstand tussen toestel en achterwand;
 - Neem afdoende maatregelen om te hoge temperaturen van een wand achter de boezem te voorkomen, inclusief de materialen en/of voorwerpen die zich achter de wand bevinden;
 - Plaats het toestel op steunen van onbrandbaar en hittebestendig materiaal;
 - Dek het toestel niet af en/of pak het niet in met een isolatiedeken of enig ander materiaal;
 - Breng geen wijzigingen aan het toestel aan.

!Let op

- Houd rekening met de minimale inbouwdiepte van het toestel; Global 70XT CF: 350 mm (zie Afb. 2).
- Houd rekening met de minimale inbouwhoogte van het toestel: 180 mm (zie Afb. 2)

Het toestel moet strak ingebouwd worden in de boezem of rondom voorzien worden van een sierlijst of front. Op verzoek is de stucijst, de sierlijst meegeleverd.

Het plaatsen van het toestel gebeurt als volgt:

- Breng de stucijst aan bij strakke inbouw van het toestel; zie de meegeleverde instructies.
- Bepaal de plaats van het toestel; zie Afb. 1 voor de afmetingen van het toestel.
- Bepaal de inbouwhoogte van het toestel.
- Zorg voor een gasaansluiting ter plekke; zie voor details paragraaf 6.3.
- Maak een doorvoer voor het verbrandingsgasafvoersysteem met de onderstaande diameter; zie voor details paragraaf 6.5:
 - Ø110 mm voor een dakdoorvoer door onbrandbaar materiaal;
 - Ø200 mm voor een dakdoorvoer door brandbaar materiaal.
- Zet het toestel - op de bestemde plek - op steunen met de vereiste hoogte (zie Afb. 3) en
- Zet het gelijktijdig waterpas.
- Sluit de gasleiding aan op het toestel zoals hieronder is beschreven.

Het gasregelblok bevindt zich in de bak onder de brander. Voor het aansluiten van de gasleiding dient u de branderplaat te verwijderen.

Ga als volgt te werk:

- Verwijder de ruit (zie paragraaf 6.8).
- Bewaar de ruit op een veilige plaats.
- Neem de vermiculietbak eruit (zie Afb. 4a)

- Draai de inbusbout aan weerszijden van de verbrandingskamer los met de meegeleverde inbussleutel (zie Afb. 4b).
- Pak de verbrandingskamer aan de zijkanten vast en neem deze uit (zie Afb. 4c).
- Neem de bodemstrip eruit (zie Afb. 4a).
- Draai de parkers van de branderplaat los; zie Afb. 4d.
- Til de branderplaat met toebehoren op; zie Afb. 4e.
- Bevestig de convectiekast aan de wand m.b.v. de meegeleverde keilbouten en carrosserieringen.

!Let op - Gebruik de 4 openingen in de achterwand van de convectiekast.

- Snij de binnenste ring uit de linker of rechter doorvoertule. De doorvoertulen bevinden zich in de bodem van de bak onder de brander.
- Maak een gasvoorziening tot in de bak onder de brander (zie Afb. 4h).
- Blaas zonodig de gasleiding schoon.
- Sluit de flexibele gasleiding aan op de gasaansluiting met gaskraan.

 **Let op** - Vermijd knikken in de leiding

!Let op De waakvlamleiding moet beschermd worden tegen mogelijk corrosie invloeden door bijvoorbeeld vocht, naar beneden vallende specie, naar beneden gevallen vuil uit een schoorsteen, enz. De waakvlamleiding moet duurzaam vrij gehouden worden van de grond en de wanden van de ruimte waarin het toestel wordt ingebouwd."

- Ontlucht de gasleiding.
- Plaats de ontvanger; zie hiervoor paragraaf 7.1.
- Stel de communicatiecode in tussen ontvanger en afstandsbediening; zie paragraaf 7.2.

 **Let op** Ontsteek het toestel niet voordat het volledig is geïnstalleerd.

- Controleer de gasdichtheid zoals beschreven in paragraaf 8.1.
- Controleer de voordruk zoals beschreven in paragraaf 8.2.
- Plaats de branderplaat met toebehoren terug en zet deze vast met de parkers.
- Schuif de bodemstrip bij het plaatsen links en rechts in de u-vormige uitsparingen; zie Afb. 4g.
- Plaats de verbrandingskamer terug in de convectiekast en zet deze aan weerszijden vast met de inbusbout.

!Let op - Sluit de aansluitstomp goed aan op de trekonderbreker bij het terugplaatsen van de verbrandingskamer; zie Afb. 4f;

- Leg de vermiculietbak achterin de verbrandingskamer.
- Verwijder het plakband op de convectiekast.
- Plaats de blokkenset; zie paragraaf 6.7

6.5 Verbrandingsgasafvoersysteem

Voor een aansluiting van de Global 70XT CF op een bestaand schoorsteenkanaal (anders dan de class I chimney in het Verenigd Koninkrijk) wordt een flexibele RVS pijp aanbevolen voor de afvoer van de verbrandingsgassen. Bij inbouw in een schouw/stookplaats aangesloten op een bestaand schoorsteenkanaal in het Verenigd Koninkrijk (class I chimney), is de los meegeleverde Engelse beschrijving 'Fitting into a conventional class I chimney' mede van toepassing. Dit boekje bevat naast de installatie instructies ook aanvullende testen.

6.5.1 Algemeen

Het toestel is van het type B_{IIAS}.
De doorvoer naar buiten wordt uitgevoerd met een dakdoorvoer (zie paragraaf 6.5.2)

 **Let op** - Gebruik een geschikt verbrandingsgasafvoersysteem met een diameter van 100 mm voorzien van het CE-merk.

Het verbrandingsgasafvoersysteem wordt opgebouwd vanaf (de aansluitstomp van) het toestel.

6.5.2 Aansluiting verbrandingsgasafvoersysteem

Op het toestel dient minimaal 3 meter afvoerpijp aangesloten te worden.

Bochten in het verbrandingsgasafvoersysteem zijn niet toegestaan.

De dakdoorvoer kan zowel in een schuin dak als in een platdak uitmonden.

De dakdoorvoer kan geleverd worden met een plakplaat voor een plat dak dan wel met een universeel verstelbare pan voor een schuin dak.

 **Let op** - Houd een afstand van minimaal 50 mm aan tussen de buitenkant van het afvoersysteem en de wanden en/of het plafond. Als het systeem wordt ingebouwd in bijvoorbeeld een koof, dient deze rondom uitgevoerd te worden in onbrandbaar materiaal;
- Gebruik hittebestendig isolatiemateriaal bij doorvoer door brandbaar materiaal.

!Let op Sommige hittebestendige isolatiematerialen bevatten vluchtige componenten, die langdurig een onaangename geur verspreiden; deze zijn niet geschikt.

Plaats het verbrandingsgasafvoersysteem als volgt:

- Bouw het systeem op vanaf (de aansluitstomp van) het toestel.
- Sluit de pijpstukken aan.
- Breng voldoende beugels aan, zodat het gewicht van de pijpen niet op het toestel rust.
- Bepaal de resterende lengte voor de dakdoorvoer.
- Maak de dakdoorvoer op maat.

!Let op - Zorg ervoor dat de juiste insteeklengte behouden blijft.

• Sluit de dakdoorvoer aan op de afvoerpijp.

!Let op - Zorg ervoor dat de universele dakpan goed aansluit op de omliggende pannen;
- Zorg ervoor dat de plakplaat goed aansluit op het platte dak.

6.6 Plaatsen boezem

Deze paragraaf beschrijft hoe het toestel ingebouwd wordt in een boezem. Voor een goede afvoer van de warmte dient er voldoende ruimte rondom het toestel aanwezig te zijn. De boezem moet voldoende geventileerd worden door middel van ventilatieopeningen. Er is geen ventilatie nodig bij een bestaand schoorsteenkanaal met een gemetselde vuurplaats die de warmte voldoende kan absorberen. Ventilatieopening geldt dus ook niet voor de class I chimney in het Verenigd Koninkrijk.

!Let op - Gebruik onbrandbaar en hittebestendig materiaal voor de boezem inclusief de bovenkant van de boezem, het materiaal in de boezem en de achterwand van de boezem;
- Voorkom dat het toestel wordt belast door het gewicht van de boezem bij gebruik van steenachtige materialen;
- De doorlaat van de - zo hoog mogelijk geplaatste - ventilatieopeningen bedraagt minimaal 200 cm².

!Let op - Houd rekening met de minimale inwendige breedte van de boezem: 750 mm (zie Afb. 2);
- Houd bij het plaatsen van de boezem rekening met de plaats van de ventilatieopeningen (V); zie Afb. 2.

!Tip Breng de ventilatieopeningen bij voorkeur aan weerszijden van de boezem aan. U kunt gebruik maken van DRU ventilatie-elementen.

- Controleer of het verbrandingsgasafvoersysteem op de juiste manier is geplaatst.
- Controleer de borging van de klembanden met parkers op plaatsen die later onbereikbaar zijn.
- Stuc niet op of over de flenzen (zie Afb. 2, maximale stuclijn M) omdat door de warmte van het toestel scheuren kunnen ontstaan;
- Plaats zonodig de sierlijst of het front rondom het toestel; zie de meegeleverde instructies.
- Laat bij toepassing van steenachtige materialen en/of afwerking met stucwerk de boezem vóór ingebruikname minimaal 6 weken drogen ter voorkoming van scheuren.

6.7 Plaatsen houtset

Het toestel wordt geleverd met een houtset.



Let op

Houdt u zich strikt aan onderstaande instructies ter voorkoming van onveilige situaties:

- gebruik uitsluitend de meegeleverde houtset;
- plaats de houtset exact volgens de beschrijving;
- laat de waakvlambrander en de ruimte er omheen vrij (zie Afb. 5a);
- laat thermokoppel 2 en de ruimte er omheen vrij (zie Afb. 5a);
- voorkom dat het fijne stof van het vermiculiet op de brander terechtkomt.

6.7.1 Houtset

De houtset bestaat uit zwart vermiculiet (zie Afb. 6a), chips (zie Afb. 6b) en een viertal stammen.

- Vul de branderbak met vermiculiet; verdeel het vermiculiet gelijkmatig.

!Let op - U kunt het vlambeeld beïnvloeden door het vermiculiet te verplaatsen, maar
- het branderdek moet wel bedekt blijven met vermiculiet om te voorkomen dat de levensduur van de brander afneemt.

- Identificeer de stammen A t/m D aan de hand van Afb. 7a.

!Tip Maak bij de identificatie gebruik van de brandvlekken op de stammen.

- Plaats achtereenvolgens stam A (achterste stam), stam B (midden stam) en stam C (rechter stam) (zie Afb. 7b t/m 7h).

!Let op Maak gebruik van de plaatsingsbeugels zoals weergegeven is in de afbeeldingen.

- Vul de bak rondom de brander met chips; verdeel de chips gelijkmatig; zie Afb. 7j.
- Plaats tenslotte stam D, de linker stam; zie Afb. 7k.

6.8 Ruit

Na het plaatsen van de hout-/kiezelset kan de ruit geplaatst worden zoals hieronder is beschreven.

!Let op - Voorkom beschadiging bij het verwijderen/plaatsen van de ruit;
- Gebruik de bijgeleverde inbusleutel voor het losdraaien/vastzetten van de inbusbouten.

6.8.1 Verwijderen ruit

Voor het verwijderen van de ruit volgt u onderstaande aanwijzingen (zie Afb. 10a t/m Afb. 10d)

- Draai de inbusbouten uit de bovenste glasstrip één à twee slagen los.

- Pak de bovenste glasstrip aan weerszijden vast.
- Trek de glasstrip naar voren en
- Duw deze omhoog.
- Kantel de ruit aan de bovenkant iets naar u toe.
- Pak de ruit aan beide zijanten vast.
- Neem de ruit uit de onderste glasstrip.

6.8.2 Plaatsen ruit

- Plaats de ruit in de onderste glasstrip.
- Trek de bovenste glasstrip naar voren en
- Duw deze omhoog.
- Kantel de ruit aan de bovenkant van u af.
- Plaats de bovenste glasstrip over de ruit .
- Druk de bovenste glasstrip aan.
- Draai de inbusbouten weer vast

!Let op

- Vermijd/verwijder vingerafdrukken op de ruit omdat deze inbranden;
- Draai de inbusbouten niet te vast ter voorkoming van doldraaien: vast=vast.

7. Draadloze afstandsbediening

Het toestel wordt geleverd met een draadloze afstandsbediening.

Zowel het ontsteken, het regelen van de vlamhoogte als het uitschakelen gebeurt met behulp van de afstandsbediening die een ontvanger aanstuurt.

In de **Gebruikershandleiding**, hoofdstuk 4, Draadloze afstandsbediening, is de bediening van het toestel inclusief de werking van de afstandsbediening beschreven.



Let op Ontsteek het toestel niet voordat het volledig is geïnstalleerd.

7.1 Aansluiten ontvanger

De ontvanger moet op het toestel worden aangesloten voordat de batterijen worden geplaatst.

De ontvanger wordt in de bak onder de brander geplaatst.

Ga als volgt te werk (zie Afb. I Ia):

- Sluit de bruine stekker van het aansluitsnoer aan op de ontvanger (zie Afb. I Ia, pijl F).
- Sluit de witte stekker aan op het gasregelblok.

!Tip De stekkers hebben verschillende maten die corresponderen met de connectoren.

- Sluit de kabels van het thermokoppel aan op de ontvanger (zie Afb. I Ia, pijlen B).

!Tip

- De grootte van het oog correspondeert met de grootte van de schroef;
- De kleur van oog en schroef correspondeert eveneens.

- Sluit de zwarte draad met de witte stekker van thermokoppel 2 aan op de ontvanger (zie Afb. I Ia, pijl E).

!Let op

- Zorg ervoor dat de draden van thermokoppel 2 vrij liggen van delen die warm worden;
- Voorkom dat de ontstekingskabel in contact komt met andere bedrading.

- Sluit de ontstekingskabel aan op de ontvanger (zie Afb. I Ia, pijl A).

!Let op

De batterijhouder ligt in een bakje onderin de spleet tussen de verbrandingskamer en de convectiekast.

- Sluit de kabel van de batterijhouder aan op de ontvanger (zie Afb. I Ia, pijl C en Afb. I Ib).
- Plaats de ontvanger in de bak onder de brander en buig de clip om (zie Afb. I Ib, pijl).

!Let op

Lees eerst paragraaf 7.1.1 en 7.2 voor het buigen van de clip.

- Buig de antenne uit de clips (zie Afb. I Ia, pijl D).
- Zet de antenne rechtop.

!Let op

- Plaats de antenne niet te dicht bij de ontstekingskabel en/of metalen delen;
- Leg de ontstekingskabel niet over en/of langs metalen delen: dit verzwakt de vonk;
- Leg de ontstekingskabel niet over de ontvanger: dit kan de ontvanger beschadigen;
- Vermijd stof op of in de ontvanger: dek deze af bij werkzaamheden.

7.1.1 Plaatsen / vervangen batterijen van ontvanger

De batterijen moeten in de speciale batterijhouder geplaatst worden en niet in de ontvanger.



Let op Houdt u zich hier strikt aan ter voorkoming van schade aan de ontvanger.

De batterijhouder ligt in een bakje onderin de spleet tussen de verbrandingskamer en de convectiekast. Door de (geleide) band naar u toe te trekken, komt de batterijhouder te voorschijn. (zie **Gebruikershandleiding**, Afb. I en Afb. 2a t/m 2d).

U kunt de batterijen als volgt plaatsen/vervangen:

- Trek de (geleide)band naar u toe.
- Pak de batterijhouder.
- Draai de schroef los.
- Schuif de deksel eraf.
- Verwijder en plaats de 4 penlite (type AA) batterijen.

!Let op

- Vermijd kortsluiting tussen de batterijen en metalen voorwerpen/delen;
- Let op de "+" en "-" polen van de batterijen en de houder;
- Gebruik alkaline batterijen;
- Batterijen vallen onder "klein chemisch afval" en mogen dus niet bij het huisvuil.

- Schuif de deksel terug.
- Schroef de deksel weer vast.
- Plaats de houder terug.

!Let op Zorg ervoor dat de geleideband onder de houder zit.

7.2 Instellen communicatiecode

Voordat het toestel in gebruik wordt genomen, moet een communicatiecode ingesteld worden tussen de afstandsbediening en de ontvanger.

Als de ontvanger of de afstandsbediening wordt vervangen, moet een nieuwe code ingesteld worden.

De code wordt willekeurig gekozen uit de 65000 codes die beschikbaar zijn. Hierdoor is de kans klein dat andere afstandsbedieningen in uw omgeving dezelfde code gebruiken en de werking van uw toestel beïnvloeden.

Ga als volgt te werk:

- Plaats zonodig de batterijen in de batterijhouder van de ontvanger; zie paragraaf 7.1.1.
- Plaats zonodig de 9V blok-batterij in de afstandsbediening; zie **Gebruikershandleiding**, paragraaf 4.2.6.
- Neem de ontvanger uit de bak onder de brander; zie zonodig paragraaf 7.3.
- Druk de reset-knop op de ontvanger in totdat u achter-eenvolgens twee geluidssignalen hoort (zie Afb. 12).
- Laat na het tweede, langere signaal de reset-knop los.
- Druk binnen 20 seconden op knop 'kleine vlam' op de afstandsbediening totdat u twee korte geluidssignalen hoort: dit is de bevestiging van de goede communicatie.

7.3 Vervangen ontvanger

De ontvanger kan als volgt vervangen worden:

- Verwijder de ruit (zie paragraaf 6.8).
- Bewaar de ruit op een veilige plaats.
- Verwijder de vermiculietbak achterin de verbrandingskamer (zie Afb. 4a).
- Draai de inbusbout aan weerszijden van de verbrandingskamer los met de meegeleverde inbussleutel (zie Afb. 4b).
- Pak de verbrandingskamer aan de zijkanten vast en neem deze uit (zie Afb. 4c).
- Neem de bodemstrip eruit (zie Afb. 4a).
- Draai de parkers van de branderplaat los; zie Afb. 4d.
- Til de branderplaat met toebehoren op en neem de ontvanger uit de bak; zie Afb. 4e.
- Vervang de ontvanger en sluit deze aan weer aan (zie paragraaf 7.1).
- Stel de communicatiecode in (zie paragraaf 7.2).
- Plaats de onderdelen terug in de omgekeerde volgorde van de stappen zoals hierboven zijn beschreven.

!Let op

- Sluit de aansluitstomp goed aan op de trekonderbreker bij het terugplaatsen van de verbrandingskamer; zie Afb. 4f;
- Schuif de bodemstrip bij het terugplaatsen links en rechts in de u-vormige uitsparingen; zie Afb. 4g.

8. Eindcontrole

Ter controle van de goede en veilige werking van het toestel dient u de onderstaande controles uit te voeren vóór ingebruikname.

8.1 Gasdichtheid



Let op Alle aansluitingen dienen gasdicht te zijn.

!Let op Het gasregelblok mag aan een druk van maximaal 50 mbar blootgesteld worden.

- Controleer de aansluitingen op gasdichtheid.

8.2 Gasdruk/voordruk

De branderdruk is fabrieksmatig afgesteld; zie typeplaatje. Controle van de branderdruk is niet nodig.



Let op De voordruk in huisinstallaties dient gecontroleerd te worden omdat deze kan variëren.

Het gasregelblok bevindt zich in de bak onder de brander.

Volg de onderstaande stappen om de voordruk te controleren:

- Verwijder de ruit; zie paragraaf 6.8.
- Bewaar de ruit op een veilige plaats.
- Verwijder de vermiculietbak achterin de verbrandingskamer (zie Afb. 4a).
- Draai de inbusbout aan weerszijden van de verbrandingskamer los met de meegeleverde inbussleutel (zie Afb. 4b).
- Pak de verbrandingskamer aan de zijkanten vast en neem deze uit (zie Afb. 4c).
- Neem de bodemstrip eruit (zie Afb. 4a).
- Draai de parkers van de branderplaat los; zie Afb. 4d.
- Til de branderplaat met toebehoren op; zie Afb. 4e.
- Controleer de voordruk; zie Afb. 13 voor de meetnippel op het gasregelblok.
- Neem contact op met het energiebedrijf als de voordruk niet klopt.
- Plaats de onderdelen terug in de omgekeerde volgorde van de stappen zoals hierboven zijn beschreven.

!Let op

- Sluit de aansluitstomp goed aan op de trekonderbreker bij het terugplaatsen van de verbrandingskamer; zie Afb. 4f;
- Schuif de bodemstrip bij het terugplaatsen links en rechts in de u-vormige uitsparingen; zie Afb. 4g.

8.3 Ontsteking waakvlam- en hoofdbrander

Zie voor het aansteken van de waakvlambrander en de hoofdbrander de **Gebruikershandleiding**, hoofdstuk 4, paragraaf 4.2, Afstandsbediening.



Let op

- Wacht altijd 5 min. na het doven van de waakvlam voordat u het toestel opnieuw ontsteekt;
- De waakvlam mag niet lager ingesteld worden met behulp van de instelmogelijkheid op het gasregelblok.

8.3.1 Waakvlam

- Controleer de ontsteking van de waakvlam:
 - de waakvlambrander dient bij de eerste poging te starten.
 Als de waakvlam niet brandt, dan
 - Controleer of de ontsteking vonkt:
 - a) Zo nee, controleer of de ontstekingskabel goed is aangesloten tussen ontvanger en waakvlam; zie paragraaf 7.1 voor de bereikbaarheid.
 - b) Zo ja, dan zit er waarschijnlijk lucht in de leiding.
 - Ontlucht eventueel de leiding en/of
 - Sluit de ontstekingskabel goed aan.

8.3.2 Hoofdbrander



Let op

De brander moet vloeiend ontsteken en mag niet ploffen door vertraagd ontsteken.

- Controleer het functioneren van de hoofdbrander vanuit de stand-by (waakvlam) stand:
 - na het openen van de gasklep moet de hoofdbrander binnen enkele seconden branden.

!Tip

Bij het openen van de gasklep gaat de motor draaien; dit is hoorbaar.

- 1) Als de hoofdbrander niet brandt, dan:
 - Controleer of de ruimte rond de waakvlam vrij is.
 - Controleer de plaatsing van de hout-/kiezelset.
 - Verhelp eventueel bovenstaande fouten.
 - Test de hoofdbrander 5x op de goede werking.
- 2) Als de hoofdbrander ontsteekt, maar dooft na ca. 22 seconden, dan:
 - Controleer de bedrading van thermokoppel 2 op:
 - Losse bedrading;
 - Verkeerd aangesloten bedrading;
 - Kortsluiting;
 - Draadbreek.
 - Controleer of thermokoppel 2 is vervuild.
 - Controleer of thermokoppel 2 goed in de vlam isgeplaatst; zie Afb. 5b.
 - Controleer of thermokoppel 2 defect is; zie Hoofdstuk 11, Tabel 4 onder J7.
 - Controleer of de ontvanger defect is; zie Hoofdstuk 11, Tabel 4 onder J8.
 - Verhelp eventueel bovenstaande fouten.
 - Test de hoofdbrander 5x op de goede werking.

8.4 Vlambeeld

Het vlambeeld kan pas echt beoordeeld worden als het toestel meerdere uren heeft gebrand. Vluchtige componenten uit verf, materialen e.d., die de eerste uren uitdampen, beïnvloeden het vlambeeld.

!Let op

Als de boezem gemaakt is van steenachtige materialen of afgewerkt is met stucwerk mag dit pas 6 weken na het plaatsen van de boezem ter voorkoming van krimpscheuren.

- Controleer of het vlambeeld acceptabel is. Als het vlambeeld niet acceptabel is dan kan dat te wijten zijn aan:
 - het uitdampen van vluchtige stoffen;
 - het niet goed aanbrengen van de houtset.
- Verbeter eventueel de opstelling van de houtset.

9. Onderhoud

Het toestel dient eenmaal per jaar door een vakbekwame installateur op het gebied van gas sfeerverwarming gecontroleerd, gereinigd en eventueel gerepareerd te worden. In ieder geval dient de goede en veilige werking van het toestel gecontroleerd te worden.



Let op

- Sluit de gaskraan tijdens onderhoudswerkzaamheden;
- Controleer de gasdichtheid na reparatie;
- Draai – na vervanging van het thermokoppel – de wartel eerst handvast aan en daarna nog een kwartslag met een passende sleutel;
- De waakvlam mag niet lager ingesteld worden met behulp van de instelmogelijkheid op het gasregelblok.

- Reinig, indien nodig, de onderstaande componenten:
 - de waakvlambrander;
 - de ruimte rondom de waakvlambrander;
 - thermokoppel 2;
 - de ruit.

!Let op

- Verwijder/plaats de ruit zoals beschreven in paragraaf 6.8;
- Verwijder de aanslag op de binnenkant van de ruit met een vochtige doek of een niet-krassend reinigingsmiddel zoals koperpoets;
- Vermijd/verwijder vingerafdrukken op de ruit omdat deze inbranden;
- Vervang een gebroken en/of gescheurde ruit zoals beschreven in paragraaf 6.8.



Let op

Plaats zonodig de houtset correct terug; zie hiervoor paragraaf 6.7.

- Inspecteer het verbrandingsgasafvoersysteem.



Let op

Er dient altijd een eindcontrole uitgevoerd te worden.

- Voer een controle uit zoals beschreven in hoofdstuk 8.

9.1 Onderdelen

Onderdelen die vervangen moeten worden, zijn verkrijgbaar bij uw leverancier.

10. Oplevering

U dient de gebruiker vertrouwd te maken met het toestel. U dient haar/hem te instrueren over onder meer de ingebruikname, de werking en de afstandsbediening, het jaarlijkse onderhoud.



Let op

- Laat de gebruiker bij storingen/slecht functioneren onmiddellijk de gaskraan sluiten en contact opnemen met de installateur ter voorkoming van onveilige situaties;
 - Wijs de gaskraan aan;
 - Wijs op de voorzorgsmaatregelen in de gebruikershandleiding tegen onbedoeld ontsteken door andere draadloze afstandsbedieningen zoals autosleutels en garagedeur openers.
-
- Instrueer de gebruiker over het toestel en de afstandsbediening.
 - Wijs er bij ingebruikname op, dat
 - ter voorkoming van scheuren een boezem gemaakt van steenachtige materialen of afgewerkt met stucwerk minimaal 6 weken dient te drogen vóór ingebruikname
 - bij de eerste keer stoken vluchtige componenten uitdampen uit verf, materialen e.d.;
 - bij het uitdampen het toestel bij voorkeur op de hoogste stand wordt gezet;
 - de ruimte goed wordt geventileerd .
 - Overhandig de gebruiker dit boekje met handleidingen (het boekje dient bij het toestel bewaard te blijven).

11. Storingen

In de onderstaande tabel vindt u een overzicht van storingen die kunnen optreden, de mogelijke oorzaak en de oplossing.

Onderdelen als het gasregelblok, de ontvanger en de ontstekingskabel bevinden zich in de bak onder de brander; zie paragraaf 8.2 resp. 7.3 voor de bereikbaarheid.

Tabel 4: Diagnose van storingen

PROBLEEM	MOGELIJKE OORZAAK	OPLOSSING
A. Geen transmissie (motor draait niet)	1. De (nieuwe) communicatie code tussen ontvanger en afstandsbediening moet nog bevestigd worden. 2. Lege batterijen. 3. Ontvanger beschadigd. 4. Afstandsbediening beschadigd. 5. Motorkabel bij de klep / ontvanger gebroken. 6. Kromme pennen van de 8-draadsconnector. 7. Slechte ontvangst.	1. Stel de communicatiecode opnieuw in; zie paragraaf 7.2 2. Vervang de batterijen. !Let op Voorkom kortsluiting tussen de batterijen en metalen delen van het toestel. 3. Vervang de ontvanger en bevestig de code (oplossing 1). 4. Vervang de afstandsbediening en bevestig de code (oplossing 1). 5. Vervang de motorkabel. 6. Zorg dat de pennen van de 8-draadsconnector recht staan. 7. Verander de stand van de antenne.
B. Geen ontsteking(vonk)	1. Knop A in MAN stand. 2. Ontstekingskabel niet goed aangesloten. 3. Ontstekingspen gecorrodeerd. 4. Wachtijd van 60 seconden voor volledige herstart nog niet voorbij.	1. Zet knop A op gasregelblok op ON; zie Afb. 14. 2. Sluit de ontstekingskabel goed aan. Vervang zonodig de ontstekingskabel. 3. Vervang de ontstekingspen. 4. Neem de benodigde wachtijd in acht.
C. Geen geluidssignaal	1. Ontvanger beschadigd. 2. Wachtijd van 60 seconden voor volledige herstart nog niet voorbij.	1. Vervang de ontvanger en bevestig de code (oplossing 1 bij A). 2. Neem de benodigde wachtijd in acht.
D. Eén doorlopend geluidssignaal van 5 sec. (Mogelijk zijn er 7 korte piepen vóór het 5 sec. geluidssignaal)	1. Losse bedrading tussen ontvanger en gasregelblok. 2. Ontvanger beschadigd. 3. Kromme pennen van de 8-draadsconnector. 4. Magneetklep beschadigd.	1. Sluit de bedrading goed aan. 2. Vervang de ontvanger en bevestig de code (oplossing 1 bij A). 3. Zorg dat de pennen van de 8-draads connector recht staan. 4. Vervang het gasregelblok.

PROBLEEM	MOGELIJKE OORZAAK	OPLOSSING
E. Geen waakvlam	1. Lucht in de waakvlamleiding. 2. Thermokoppeldraden van thermokoppel verwisseld. 3. Geen vonk bij de waakvlambrander. 4. Spuitstuk verstopt.	1. Spoel de leiding of start het ontstekingsproces meerdere keren. 2. Controleer de polariteit van de thermokoppelbedrading. Sluit de thermokoppeldraden zonodig goed aan. 3.1 Controleer of de ontstekingskabel goed is aangesloten. Sluit deze zonodig goed aan. 3.2 Vervang zonodig de ontstekingskabel. 3.3 Vervang zonodig de ontstekingspen. 4.1 Reinig het spuitstuk. 4.2 Vervang zonodig het spuitstuk.
F. Elektronica blijft vonken terwijl de waakvlam brandt	1. Ontvanger beschadigd.	1. Vervang de ontvanger en bevestig de code (oplossing I bij A).
G. Waakvlam brandt wel maar magneetklep sluit na ca. 10 seconden of wanneer het toestel heet wordt	1. Thermokoppel functioneert niet. 2. Batterijen (bijna) leeg.	1.1 Meet de spanning, m.b.v. een digitale multimeter ingesteld op mV bereik, door de kabels aan te sluiten op de kabelschoen. De kabelschoen bevindt zich aan de buitenkant, direct naast de magneetmoer aan de achterkant van het gasregelblok; zie Afb. 15. De spanning moet binnen 20 seconden tenminste 5mV zijn. Deze mag niet lager zijn wanneer het toestel warm is. Is de spanning te laag, dan moet: - het thermokoppel beter in de vlam geplaatst worden of - het thermokoppel vervangen worden. 1.2 Controleer de grootte van de waakvlam. Corrigeer een te kleine waakvlam. 1.3 Controleer de bedrading van het thermokoppel naar de ontvanger. Vervang zo nodig de bedrading. 2. Vervang de batterijen in de ontvanger. !Let op Voorkom kortsluiting tussen de batterijen en metalen delen van het toestel.
H. Er zijn wel korte geluidssignalen maar geen vonken en er is geen geluid / getik hoorbaar van de magneet die de klep opent	1. Batterijen (bijna) leeg.	1. Vervang de batterijen in de ontvanger. !Let op Voorkom kortsluiting tussen de batterijen en metalen delen van het toestel.

PROBLEEM	MOGELIJKE OORZAAK	OPLOSSING
I. Waakvlam brandt maar er is geen gasstroom naar de hoofdbrander	- Knop A in MAN stand. - Toestel op waakvlam stand. - Voordruk van het gas te laag. - Beschadigde magneetklep.	- op gasregelblok naar ON; zie Afb. 14. - Verhoog de vlamhoogte door op de knop  (grote vlam) van de afstandsbediening te drukken. - Controleer voordruk. Schakel zonodig het energiebedrijf in. - Vervang het gasregelblok.
J. Hoofdbrander ontsteekt, maar dooft na ca. 22 seconden	- Losse bedrading thermokoppel 2. - Bedrading thermokoppel 2 verkeerd aangesloten. - Kortsluiting in bedrading van thermokoppel 2. - Draadbreuk in bedrading van thermokoppel 2. - Thermokoppel 2 is vervuild. - Thermokoppel 2 is niet goed in vlam geplaatst (zie Afb. 5b). - Thermokoppel 2 is defect. - Ontvanger defect.	- Sluit de bedrading goed aan. - Sluit de bedrading goed aan. - Vervang de bedrading. - Vervang de bedrading. - Reinig het thermokoppel. - Plaats het thermokoppel goed in de vlam. - Controleer de spanning van thermokoppel 2 net voor de hoofdbrander uitgaat. Is de spanning lager dan 1,8 mV, vervang dan thermokoppel 2. - Controleer de spanning van thermokoppel 2 net voor de hoofdbrander uitgaat. Is de spanning hoger dan 1,8 mV, vervang dan de ontvanger.

In de onderstaande tabel staan de onderdelen vermeld die met het toestel worden meegeleverd.

Tabel 2: Meegeleverde onderdelen

Onderdeel	Aantal
Houtset	1x
Stucijst/sierijst (Frame Alpha)/front (Frame Bèta)*	1x
Boekje met handleidingen	1x
Concise installation guide**	1x
Installation instructions for fitting into a conventional class I chimney**	1x
Afdichtingsband**	
Debris shield**	1x
Keilbouten M6	4x
Zeskant moer M6	4x
Carrosseriering	4x
Reserve inbusbouten t.b.v. montage ruit	3x
Inbussleutel 5 mm	1x
Afstandsbediening	1x
9V blokbatterij	1x
Penlite batterij (type AA)	4x
* op verzoek is de stucijst, de sierijst of het front meegeleverd	
** alleen bestemd voor het Verenigd Koninkrijk	

In de onderstaande tabellen staan de technische gegevens van Global 70XT CF vermeld.

Tabel 3: Technische gegevens

Typeaanduiding(en):		Global 70XT CF RCE			
Type		B11AS			
Categorie		I2EK / I2E / I2E+ / I2H / I2ELL / I3P			
Gassoort:	Symbol	G25/ G25.3*	G20	G31	Eenheid
Indirecte verwarmingsfunctionaliteit		Nee	Nee	Nee	-
Directe warmteafgifte		4,6	4,7	4,8	kW
Indirecte warmteafgifte		-	-	-	kW
Uitstoot bij ruimteverwarming NO_x		116,7	119,2	86,8	mg/kWh _{input} (GCV)
Warmteafgifte					
Nominale warmteafgifte	P_{nom}	4,6	4,7	4,8	kW
Minimale warmteafgifte (indicatief)	P_{min}	2,0	2,0	2,9	kW
Technische gegevens					
Nominale belasting (Hs)		6,7	6,9	6,9	kW
Nominale belasting (Hi)		6,0	6,2	6,3	kW
Gasverbruik volstand		712	657	252	l/h
Gasverbruik kleinstand		317	297	147	l/h
Branderdruk volstand		18,2	14,5	27,0	mbar
Branderdruk kleinstand		3,9	3,2	9,8	mbar
Branderspuitstuk		7x Ø 0,81	7x Ø 0,81	7x Ø 0,55	mm
Kleinstelspuitstuk		Ø 1,45	Ø 1,45	Ø 1,10	mm
Rendementsklasse (EN613)		2	2	2	-
Nuttig rendement (NCV)					
Nuttig rendement bij nominale warmteafgifte	$\eta_{\text{th,nom}}$	76,4	77,4	76,9	%
Nuttig rendement bij minimale warmteafgifte (indicatief)	$\eta_{\text{th,min}}$	72,9	70,9	75,0	%
Aanvullend elektriciteitsverbruik					
Bij nominale warmteafgifte	$e_{\text{l,max}}$	-	-	-	kW
Bij minimale warmteafgifte	$e_{\text{l,min}}$	-	-	-	kW
In stand-by modus	$e_{\text{l,SB}}$	-	-	-	kW
Vermogens eis voor de permanente waakvlam					
Vermogens eis voor de permanente waakvlam (indien van toepassing)	P_{pilot}	-	-	-	kW
Energie-efficiëntie					
Energie-efficiëntie-index	EEL	76	77	77	
Energie-efficiëntieklasse		D	C	C	

Type warmteafgifte/sturing kamertemperatuur	
Eentrapswarmteafgifte, geen sturing van de kamertemperatuur	Nee
Twee of meer handmatig in te stellen trappen, geen sturing van de kamertemperatuur	Nee
Met mechanische sturing van de kamertemperatuur door thermostaat	Nee
Met elektronische sturing van de kamertemperatuur	Ja
Met elektronische sturing van de kamertemperatuur plus dag-tijdschakelaar	Ja
Met elektronische sturing van de kamertemperatuur plus week-tijdschakelaar	Ja**
Andere sturingsopties	
Sturing van de kamertemperatuur, met aanwezigheidsdetectie	Ja**
Sturing van de kamertemperatuur, met openraamdetectie	Ja**
Met de optie van afstandsbediening	Ja

* Dit toestel is geschikt voor G25.3 met de samenstelling volgens NTA 8837.

** Toe te passen met behulp van domotica.

Inhoudsopgave

Woord vooraf	18	4. Draadloze afstandsbediening	19
1. Inleiding	18	4.1 Vervangen batterijen ontvanger.....	19
2. Veiligheid	18	4.2 Afstandsbediening.....	19
2.1 Algemeen.....	18	5. Onderhoud	20
2.2 Voorzorgsmaatregelen / veiligheidsinstructies.....	18	6. Milieu	20
3. Ingebruikname	18	6.1 Algemeen.....	20
3.1 Eerste keer.....	18	6.2 Toestel.....	20
3.2 Bescherming.....	19	7. Garantie	20
3.3 Verkleuring van wanden en plafonds.....	19		

Woord vooraf

Als fabrikant van gasverwarmingstoestellen ontwikkelt en produceert DRU producten volgens de hoogst mogelijke kwaliteits-, prestatie- en veiligheidseisen. U kunt hierdoor rekenen op jarenlang gebruikspijplezier. Dit toestel is voorzien van een CE merk. Gastoestellen die voldoen aan de eisen voor veiligheid, milieu en energiegebruik, de zogenaamde essentiële eisen, uit de Europese Gas-toestellenrichtlijn hebben het recht het CE-merk te dragen. U dient de installatie en het onderhoud van uw toestel te laten uitvoeren door een vakbekwame installateur op het gebied van gas sfeerverwarming. Bij het toestel worden twee handleidingen geleverd: de installatiehandleiding en de gebruikershandleiding. Deze zijn in één boekje samengevoegd. De gebruikershandleiding geeft u de informatie die u nodig hebt om het toestel goed en veilig te laten functioneren. U dient deze gebruikershandleiding zorgvuldig te lezen alvorens het toestel in gebruik te nemen. U dient het boekje met handleidingen zorgvuldig te bewaren. Als gebruiker mag u uitsluitend de werkzaamheden uitvoeren die in de gebruikershandleiding worden genoemd. Voor de overige werkzaamheden schakelt u een vakbekwame installateur in. Neem bij vragen of twijfel altijd contact op met uw installateur. In de handleidingen worden de volgende markeringen gebruikt om belangrijke informatie aan te geven:

- Uit te voeren acties.
- ! Tip** Suggesties en adviezen.
- ! Let op** Deze instructies zijn noodzakelijk ter voorkoming van mogelijke problemen bij installatie en/of gebruik.
-  **Let op** Deze instructies zijn noodzakelijk ter voorkoming van brand, persoonlijk letsel of andere ernstige schade.

1. Inleiding

Uw toestel is een open gasfeerverwarmingstoestel. Een open toestel haalt de verbrandingslucht uit de leefomgeving. Het is daarom van belang dat de leefruimte goed geventileerd wordt. Voor de veilige werking van het toestel is een oxypilot beveiliging aangebracht. Bij onvoldoende aanvoer van verse lucht grijpt de oxypilot in en wordt het toestel uitgeschakeld. De bediening van het toestel gebeurt met behulp van een draadloze afstandsbediening; deze werkt op batterijen.

2. Veiligheid

2.1 Algemeen



- Let op**
- **Leest u dit hoofdstuk over veiligheid zorgvuldig door;**
 - **Houdt u zich aan de maatregelen/instructies in deze handleiding.**

2.2 Voorzorgsmaatregelen / veiligheidsinstructies

Volg de onderstaande maatregelen/voorschriften nauwkeurig op:

- installatie en onderhoud van het toestel dienen door een professioneel gecertificeerd vakman te worden uitgevoerd welke over bewezen kennis en aantoonbare bekwaamheid beschikt. Een professionele vakman houdt rekening met alle technische aspecten zoals warmte afgifte, gasaansluiting en met verbrandingsgasafvoer vereisten. Daar waar het installatievoorschrift niet duidelijk is dient de nationale/lokale regelgeving te worden gevolgd.
- breng zelf geen wijzigingen aan het toestel aan;
- laat het onderhoud minimaal 1x per jaar uitvoeren;
- sluit de gaskraan als het toestel met een plof en/of slecht ontsteekt en waarschuw de installateur;
- sluit de gaskraan bij storingen en/of slecht functioneren van het toestel en neem contact op met de installateur;
- aat een gescheurde of gebroken ruit meteen vervangen;
- zorg voor voldoende ventilatie in de ruimte waar het toestel is geplaatst;
- houd brandbare voorwerpen en/of materialen zoals overgordijnen op minimaal 50 cm afstand van het toestel en/of de afvoerpijpen;
- Het toestel is ontworpen voor sfeer- en verwarmingsdoeleinden. Dit houdt in dat alle zichtbare oppervlaktes, inclusief de ruit heter dan 100 °C kunnen worden. Het is aan te bevelen altijd een afschermrooster voor het toestel te plaatsen als er kinderen, bejaarden of mindervaliden in dezelfde ruimte als het toestel aanwezig zijn. Indien regelmatig kwetsbare personen zonder toezicht in de ruimte aanwezig kunnen zijn, dient een vaste afscherming rondom het toestel te worden gemonteerd.
- laat kinderen en personen die de consequenties van hun handelen slecht overzien nooit alleen bij een brandend toestel;
- leg de afstandsbediening buiten het bereik van kinderen en personen die de consequenties van hun handelen slecht overzien.

3. Ingebruikname

3.1 Eerste keer

Bij toepassing van een boezem moet deze – voordat u het toestel in gebruik neemt – droog zijn ter voorkoming van krimp-scheuren.

- !Let op**
- Als de boezem van steenachtige materialen is gemaakt of is afgewerkt met stucwerk dient deze minimaal 6 weken te drogen vóór ingebruikname.

Tijdens de eerste keer stoken kan er een onaangename geur ontstaan door het uitdampen van vluchtige componenten uit verf, materialen e.d.. Dit kan meerdere uren in beslag nemen.

!Let op

- Huisdieren en vooral vogels kunnen gevoelig zijn voor de vrijkomende dampen;
- Het vlambeeld wordt in het begin beïnvloed door het uitdampen van vluchtige componenten.

!Tip

- Zet het toestel in de hoogste stand om het uitdampen te versnellen;
- Ventileer de ruimte goed;
- Verwijder huisdieren uit de ruimte.

3.2 Bescherming

Om onveilige situaties te voorkomen, dient u de onderstaande maatregelen/instructies nauwkeurig op te volgen.



Let op

- Zorg voor voldoende ventilatie in de ruimte waar het toestel is geplaatst;
- Houd brandbare voorwerpen en/of materialen zoals overgordijnen op minimaal 50 cm afstand van het toestel en/of de afvoerpijpen;
- Laat geen kleding, handdoeken e.d. op en/of dichtbij het toestel drogen ter voorkoming van brand;
- Vermijd contact met hete delen van het toestel ter voorkoming van brandwonden;
- Laat kinderen en personen die de consequenties van hun handelen slecht overzien nooit alleen bij een brandend toestel;
- Leg de afstandsbediening buiten het bereik van kinderen en personen die de consequenties van hun handelen slecht overzien.

3.3 Verkleuring van wanden en plafonds

Bruinverkleuring is een vervelend en moeilijk op te lossen probleem. Bruinverkleuring kan worden veroorzaakt door stofverbranding als gevolg van te weinig ventilatie, roken, branden van kaarsen, olielampjes e.d.. Rook van sigaretten en sigaren bevat teerstoffen die op koudere muren neerslaan.

Deze problemen kunnen (deels) voorkomen worden door goede ventilatie van de ruimte waar het toestel staat.

4. Draadloze afstandsbediening

Het toestel wordt bediend met een afstandsbediening. Zowel het ontsteken, het regelen van de vlamhoogte als het uitschakelen gebeurt met behulp van de afstandsbediening, die een ontvanger aanstuurt.


De ontvanger en de afstandsbediening worden gevoed met batterijen. Voor de ontvanger zijn 4 penlite (type AA) batterijen nodig; voor de afstandsbediening een 9V-blokbatterij. De levensduur van de batterijen is bij normaal gebruik ongeveer een jaar.

Als optie kan een adapter worden gebruikt. Informeer hier naar bij uw installateur. U hebt dan een 230 V aansluiting nodig in de omgeving van het toestel.

4.1 Vervangen batterijen ontvanger

Als de batterijen van de ontvanger bijna leeg zijn hoort u 3 korte piepjes mits het motortje voor de regeling van de hoofdbrander draait (zie paragraaf 4.2.1.1).

De batterijen bevinden zich in een houder. De houder ligt in een bakje onderin de spleet tussen de verbrandingskamer en de convectiekast (zie Afb. 1). Door de (geleide)band naar u toe te trekken, komt de batterijhouder te voorschijn. (zie Afb. 2a t/m 2d).

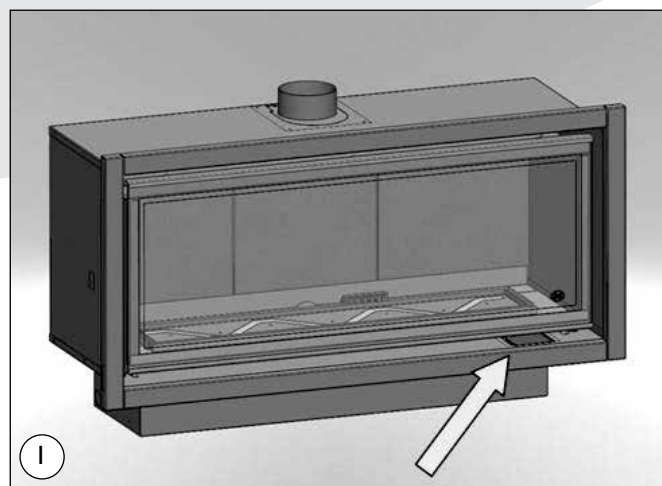



2c



2d

U kunt de batterijen als volgt vervangen:

- Trek de (geleide)band naar u toe.
- Pak de batterijhouder.
- Draai de schroef los.
- Schuif de deksel eraf.
- Verwijder en plaats de 4 penlite (type AA) batterijen.

- !Let op**
- Vermijd kortsluiting tussen de batterijen en metalen voorwerpen/delen;
 - Let op de "+" en "-" polen van de batterijen en de houder;
 - Gebruik alkaline batterijen;
 - Als er geen goede batterijen voor handen zijn gaskraan naar toestel sluiten;
 - Batterijen vallen onder "klein chemisch afval" en mogen dus niet bij het huisvuil.

- Schuif de deksel terug.
- Schroef de deksel weer vast.
- Plaats de houder terug.

- !Let op** Zorg ervoor dat de geleideband onder de houder zit.

4.2 Afstandsbediening

De standaard functies van het toestel zoals het ontsteken, regelen van de vlamhoogte, stand-by (waakvlam) stand en uitschakelen worden uitgevoerd in de MAN stand, de handmatige regeling van de afstandsbediening (zie Afb. 3).



3

Daarnaast kan met behulp van de afstandsbediening een aantal extra functies ingesteld worden:

- temperatuurweergave in graden Celsius of Fahrenheit;
- tijd;
- thermostaat functie;
- timer voor thermostaat functie.



Let op

Hoewel de kans klein is, is niet uit te sluiten dat het ontstekingsproces van uw toestel onbedoeld wordt gestart door andere draadloze afstandsbedieningen. Hierbij wordt gedacht aan de afstandsbediening van een gashaard van burens, maar ook aan autosleutels en garagedeur openers. Het gevolg is dat uw toestel gaat branden zonder dat u het wilt.

U kunt het onbedoeld ontsteken van uw toestel eventueel verhelpen/voorkomen door de gaskraan bij uw toestel te sluiten. Dit is de veiligste maatregel als het toestel gedurende een lange periode niet wordt gebruikt. Neem - ook als het toestel niet in gebruik is - de genoemde voorzorgsmaatregelen/ veiligheidsinstructies in acht.

4.2.1 MAN stand

Door kort op de knop SET te drukken doorloopt u achtereenvolgens de volgende functies:

MAN → * TEMP → ⏸ TEMP → (P*)TIMER → MAN
waarbij afhankelijk van de instelling van de timer:
(P*) wordt weergegeven als P1 *, P1 ⏸, P2 *, P2 ⏸

!Tip

U kunt ook terugkeren naar de MAN stand door op de knop 🔥 (grote vlam) of 🔥 (kleine vlam) te drukken.

!Let op

- Bij het indrukken van de knoppen (behalve de knop SET) verschijnt het transmissiesymbool (📶) om aan te geven dat er transmissie plaatsvindt tussen de afstandsbediening en de ontvanger;
- De ontvanger bevestigt de transmissie met een geluidssignaal;
- Het toestel gaat automatisch naar de stand-by stand als er gedurende 6 uur geen transmissie plaatsvindt.

- Zet de afstandsbediening op de MAN stand.

4.2.1.1 Ontsteken



Let op

- Wacht altijd 5 min. na het doven van de waakvlam voordat u het toestel opnieuw ontsteekt;
- Bij gebruik van propaan is extra opletendheid geboden. De waakvlam kan doven door lucht in de leiding b.v. als gevolg van het vervangen van een propaanfles: Houdt u zich strikt aan de wachttijd van 5 min. voordat u het ontstekingsproces opnieuw start;
- Sluit de gaskraan bij storingen en/of slecht functioneren en waarschuw de installateur.

!Tip

Gebruik voor toestellen op propaan een systeem met twee flessen voorzien van een automatische omschakeling naar de reservefles als losse gasflessen worden toegepast.

Het ontsteken van het toestel gaat als volgt:

- Druk de knoppen OFF en 🔥 (grote vlam) op de afstandsbediening gelijktijdig in.
- Laat de knoppen los als een kort geluidssignaal aangeeft dat het ontstekingsproces is gestart.

Achtereenvolgens:

- geven doorlopende signalen aan dat het ontstekingsproces in werking is;
- geeft een kort geluidssignaal aan dat het ontstekingsproces is voltooid;
- schakelt het toestel automatisch door naar de hoogste stand van de hoofdblander; deze gaat binnen enkele seconden branden.



Let op

- Als de waakvlam na 3 ontsteekpogingen niet brandt, moet u de gaskraan dichtdraaien en de installateur waarschuwen;
- Tijdens het ontsteken van de waakvlam hoort u geluidssignalen. Na het laatste korte geluidssignaal dient de hoofdblander binnen circa 10 seconden grotendeels ontstoken te zijn. Als dit niet gebeurt, draait u de gaskraan dicht en waarschuwt u de installateur;

- Als het toestel met een plof ontsteekt, sluit u de gaskraan en waarschuwt u de installateur.

!Tip

Er gaat een motortje lopen als de hoofdblander in bedrijf komt; dit is hoorbaar.

4.2.1.2 Vlamhoogte / Stand-by

De vlamhoogte kan traploos geregeld worden met behulp van de knoppen 🔥 (kleine vlam) en 🔥 (grote vlam). Door de vlamhoogte steeds verder te verlagen kan het toestel in de stand-by stand gezet worden; dat wil zeggen dat alleen de waakvlam nog brandt.

- Druk op de knop 🔥 (kleine vlam) om de vlamhoogte te verlagen en/of het toestel in de stand-by stand te zetten.
- Druk op de knop 🔥 (grote vlam) om de vlamhoogte te verhogen en/of de hoofdblander in te schakelen vanuit de stand-by (waakvlam) stand.



Let op

- Bij het ingedrukt houden van de knop 🔥 (grote vlam) op de afstandbediening moet de hoofdblander binnen circa 10 seconden grotendeels ontstoken zijn. Als dit niet gebeurt, draait u de gaskraan dicht en waarschuwt u de installateur;
- Als het toestel met een plof ontsteekt sluit u de gaskraan en waarschuwt u de installateur.

4.2.1.3 Uitschakelen

Het toestel wordt uitgeschakeld door op de knop OFF te drukken. Ook de waakvlam gaat dan uit.

4.2.2 Temperatuurweergave

De kamertemperatuur kan op het display in graden Celsius (°C) met een 24-uursklok of in graden Fahrenheit (°F) met een 12-uursklok weergegeven worden.

- Druk de knoppen OFF en 🔥 (kleine vlam) gelijktijdig in totdat op het display de gewenste weergave verschijnt.

4.2.3 Tijd

Op het display kan de tijd weergegeven worden.

Na het plaatsen van de batterij of het gelijktijdig indrukken van de knoppen 🔥 (grote vlam) en 🔥 (kleine vlam) knippert de tijdsaanduiding op het display en kan de tijd ingesteld worden.

- Druk gelijktijdig op de knoppen 🔥 en 🔥 totdat de tijdsaanduiding op het display knippert.
- Druk op de knop 🔥 (grote vlam) om de uren in te stellen.
- Druk op de knop 🔥 (kleine vlam) om de minuten in te stellen.
- Druk op OFF om terug te keren naar de MAN stand of wacht tot het systeem automatisch terugkeert naar de MAN stand.

4.2.4 Thermostaat functie

U kunt met behulp van de thermostaat functie twee temperaturen instellen die thermostatisch geregeld worden. Deze temperaturen worden aangeduid als dagtemperatuur en nachttemperatuur.

Het * TEMP en ⏸ TEMP symbool op het display staan resp. voor dag- en nachttemperatuur.

De kamertemperatuur wordt vergeleken met de ingestelde dag-/nachttemperatuur en de vlamhoogte wordt daarna automatisch geregeld om de ingestelde temperatuur te bereiken.

Om de dag-/nachttemperatuur functie te kunnen gebruiken moet het toestel in de stand-by stand staan.

!Let op

- Leg de afstandsbediening steeds op dezelfde plek, zodat de thermostaat de omgevingstemperatuur 'voelt';
- Zorg dat deze plek vrij is van invloeden als tocht, warmte van radiatoren en rechtstreeks zonlicht.

Voorbeeld

M.b.v. de * TEMP functie kunt u overdag de temperatuur op 20 °C houden, terwijl u m.b.v. de ⏸ TEMP functie 's nachts een temperatuur van 15 °C handhaaft.

4.2.4.1 Instellen dag-/nachttemperatuur

Met behulp van de knop SET doorloopt u achtereenvolgens de volgende functies:

MAN → * TEMP → ⏸ TEMP → (P*) TIMER → MAN

- Druk kort op de knop SET om in de * TEMP of de ⏸ TEMP stand te komen.
- Druk de knop SET in totdat de temperatuur op het display knippert.
- Stel de gewenste temperatuur in met de knoppen 🔼 (grote vlam) en 🔽 (kleine vlam).

!Let op

- De minimaal in te stellen temperatuur bedraagt 5 °C / 40 °F;
- De regeling van de nachttemperatuur wordt uitgeschakeld door de temperatuur te verlagen totdat twee streepjes ("--") op het display verschijnen.

- Druk op de knop OFF of wacht totdat op het display de stand * TEMP of ⏸ TEMP verschijnt.

4.2.4.2 Activeren thermostaat functie

Voor het activeren van de thermostaat functie volgt u onderstaande stappen:

- Zet het toestel in de stand-by (waakvlam) stand m.b.v. de knop 🔽 (kleine vlam).
- Stel de dag-/nachttemperatuur in.
- Kies de * TEMP dan wel de ⏸ TEMP functie met behulp van de knop SET.

4.2.5 Timer voor thermostaat functie

Met behulp van de timer kunnen per etmaal twee tijden ingesteld worden om de dagtemperatuur en twee tijden om de nachttemperatuur in te schakelen.

Om de nachttemperatuur te regelen moet deze minimaal op 5 °C / 40 °F ingesteld worden.

Als de nachttemperatuur op de "--" stand ingesteld wordt, blijft het toestel in de stand-by stand staan. Het toestel schakelt pas weer in bij de volgende inschakeltijd van de dagtemperatuur.

Het toestel moet in de stand-by stand staan om d.m.v. de timer geregeld te worden.

Voorbeeld schakeltijden

U hebt een dagtemperatuur resp. nachttemperatuur ingesteld van b.v. 20 °C en 15 °C.

P1 * TIMER = 7 uur; de temperatuur gaat om 7 uur naar 20 °C.

P1 ⏸ TIMER = 9 uur; de temperatuur gaat om 9 uur naar 15 °C.

P2 * TIMER = 17 uur; de temperatuur gaat om 17 uur weer naar 20 °C.

P2 ⏸ TIMER = 22 uur; de temperatuur gaat om 22 uur terug naar 15 °C.

4.2.5.1 Instellen tijden t.b.v. timer

Volg onderstaande stappen om de timer in te stellen:

- Stel de dag- en nachttemperatuur in zoals hierboven beschreven bij paragraaf 4.2.4.1.
- Druk kort op de knop SET om in de (P*) TIMER stand te komen.
- Druk de knop SET in totdat P1 * TIMER verschijnt en de tijd knippert.
- Stel de eerste inschakeltijd van de dagtemperatuur in met de knoppen 🔼 (grote vlam) en 🔽 (kleine vlam).
- Druk kort op de knop SET om de volgende tijd van de cyclus, P1 ⏸ TIMER, in te stellen.
- Stel achtereenvolgens de tijden P2 * TIMER en P2 ⏸ TIMER in.
- Druk op de knop OFF of wacht totdat op het display de stand (P*) TIMER verschijnt.

4.2.5.2 Activeren timer functie

Volg de onderstaande stappen voor het activeren van de timerregeling:

- Zet het toestel in de stand-by (waakvlam) stand m.b.v. knop 🔽 (kleine vlam).
- Stel de dag-/nachttemperatuur in als dit nog niet is gebeurd; zie hiervoor paragraaf 4.2.4.1.
- Stel de timer tijden P1 * TIMER, P1 ⏸ TIMER, P2 * TIMER en P2 ⏸ TIMER in.
- Kies de (P*) TIMER functie met behulp van de knop SET.

4.2.6 Vervangen batterij afstandsbediening

Als de batterij bijna leeg is verschijnt "BATT" op het display.

U kunt de batterij als volgt vervangen:

- Verwijder de deksel aan de achterzijde van de afstandsbediening.
- Koppel de 9V-blokbatterij los van / sluit de 9V blokbatterij aan op de connector.

!Let op

- Let op de "+" en "-" polen van de batterij en de connector;
- Gebruik alkaline batterijen;
- Batterijen vallen onder "klein chemisch afval" en mogen dus niet bij het huisvuil.

- Plaats de batterij in de houder.
- Sluit de deksel.

5. Onderhoud

Het toestel dient minimaal één keer per jaar op zijn goede en veilige werking gecontroleerd te worden.



Let op

- Laat het onderhoud van uw toestel uitsluitend uitvoeren door een vakbekwame installateur op het gebied van gas sfeerverwarming;
- Laat een gescheurde of gebroken ruit meteen vervangen;
- Breng zelf geen wijzigingen aan het toestel aan.

!Let op

- Als gebruiker mag u het toestel alleen aan de buitenkant schoonmaken:
- Gebruik geen bijtende of schurende schoonmaakmiddelen;
- Lakbeschadigingen, die het gevolg zijn van voorwerpen die op/tegen de mantel van het toestel zijn gevallen/geplaatst, vallen niet onder de garantie.

6. Milieu

6.1 Algemeen

Verpakkingsmaterialen moeten afgevoerd worden via de reguliere weg.

Batterijen vallen onder klein chemisch afval en horen in de daarvoor bestemde containers te worden geplaatst.

6.2 Toestel

Aan het einde van de levensduur moet u het toestel op een verantwoorde wijze laten verwerken, zodat het toestel of onderdelen daarvan kunnen worden hergebruikt.



Let op

Voer de volgende handelingen uit voordat u tot verwijderen overgaat:

- Sluit eerst de gaskraan;
- Draai vervolgens de koppeling tussen toestel en gaskraan los.

- Verwijder het toestel

- Zet het toestel niet bij het ongesorteerde afval, maar lever het in bij een erkend inzamelpunt.

- Neem contact op met uw gemeente voor informatie over beschikbare inleverings- en inzamelsystemen.

7. Garantie

De garantie op uw DRU toestel wordt verleend via uw leverancier. In geval van klachten dient u altijd met hem contact op te nemen. Uw leverancier zal DRU inschakelen als hij dit noodzakelijk acht. De fabrieksgarantie bedraagt 2 jaar na datum van aankoop.



Contents

Preface	26	6.7	Placing the wood/pebble set.....	29
1. Introduction	26	6.8	Glass pane.....	29
2. CE declaration	26	7. Wireless remote control	29	
3. SAFETY	26	7.1	Connecting the receiver.....	30
3.1 General.....	26	7.2	Setting the communication code.....	30
3.2 Regulations	26	7.3	Replacing the receiver	30
3.3 Precautions / safety instructions during installation.....	27	8. Final check	31	
3.4 Oxypilot safety	27	8.1	Gastightness	31
4. Instructions	27	8.2	Gas pressure / line-pressure.....	31
5. Removing the packaging	27	8.3	Ignition pilot burner and main burner	31
6. Installation	27	8.4	Flame image.....	32
6.1 Regulations	27	9. Maintenance	32	
6.2 Type of gas.....	27	9.1	Parts	32
6.3 Gas connection	27	10. Delivery	32	
6.4 Placing the appliance	27	11. Malfunctions	33	
6.5 Flue gas discharge system	28	Appendix 1 Parts included with the delivery	36	
6.6 Placing the chimney breast	28	Appendix 2 Technical data	37	
		Appendix 3 Figures	46	

Preface

DRU, a manufacturer of gas-fired heating appliances, develops and produces products that comply with the highest quality, performance and safety requirements. This guarantees that the user will be able to enjoy using his product for many years to come.

This appliance has a CE marking, which means that it complies with the essential requirements of the European gas appliance directive.

Two manuals are supplied with the appliance: the installation manual and the user manual. These have been included in one booklet.

In addition, 2 booklets are included which are intended for the United Kingdom, the 'Concise installation guide' and 'Fitting into a conventional class I chimney'.

As an installer, you must be competent in the field of atmospheric gas-fired heating.

The installation manual will give you the information you need to install the appliance in such a way that it will operate properly and safely.

This manual discusses the installation of the appliance and the regulations that apply to the installation. In addition, you will find technical data for the appliance and information on maintenance, any malfunctions that might occur and their possible causes.

The figures are included at the back of this booklet (Appendix 3).

Please carefully read and use this installation manual.

The following symbols are used in the manual to indicate important information:

- Work to be performed.
- ! Tip** Suggestions and recommendations.
- ! Caution** You will need these instructions to prevent problems that might occur during installation and/or use.
-  **Caution** You need these instructions to prevent fire, personal injury or other serious damages.

After delivery you should give this booklet containing the manuals to the user.

1. Introduction

The Global 70XT CF is an open-flued atmospheric gas-fired heating appliance. An open-flued appliance draws its combustion air from the living area. The living area must be ventilated sufficiently, in order to provide the appliance with combustion air. To guarantee a safe operation of the appliance, an oxy-pilot safety is installed. If the supply of air is insufficient, the oxy-pilot will interfere and switch off the appliance.

Global 70XT CF is suitable for construction in a newly installed chimney breast or existing mantelpiece/fireplace. In an existing chimney (other than the class I chimney in the UK), a flexible SS pipe is recommended for discharging the flue gases. This manual describes the construction of the appliance in a chimney breast. When constructed in a mantelpiece/fireplace connected to an existing chimney in

the United Kingdom (class I chimney), the separately supplied English description 'Fitting into a conventional class I chimney' also applies.

The appliance must be fitted tightly using a plaster strip (frameless) or provided with a surrounding decorative strip or front. These parts are not provided with the appliance as standard, but are available upon request. The installation instructions are provided with the part concerned.

In most cases, the chimney breast must be ventilated in order to achieve a good heat discharge (see chapter 6.6).

DRU is able to supply various ventilation elements.

The appliances are supplied with a wireless remote control that works on batteries.

2. CE declaration

We hereby declare that the design and construction of DRU's atmospheric gas-fired heating appliance comply with the essential requirements of the Gas Appliance Directive.

Internal precautions at the company will guarantee that appliances produced by DRU comply with the essential requirements of the regulation concerning gas combustion appliances and the standards applied for that purpose. This declaration will lose its validity if adjustments are made to the appliance, without prior written permission by DRU. A copy of the CE test certificate can be downloaded via www.druservice.com.

Product: Gas-fired heating appliance
Type: Global 70XT CF RCE

Applicable EC regulation:
2016/426/EU

Applied harmonized standards:
NEN-EN-613; NEN-EN-613/A1

Conformity assessment agency:
Kiwa 0063

R.P. Zantinge
General manager
Postbus 1021, 6920 BA Duiven
Ratio 8, 6921 RW Duiven
www.drufire.com

3. Safety

3.1 General

-  **Caution** - Carefully read this chapter on safety, before you start performing installation or maintenance work;
- Please observe the general regulations and the precautions/safety instructions in this manual.

3.2 Regulations

Please install the appliance in accordance with the applicable national, local and constructional (installation) regulations.

3.3 Precautions / safety instructions during installation

Carefully observe the following precautions/safety regulations:

- installation and maintenance of the appliance should be performed by a professional certified expert with proven knowledge and demonstrable competence in this field. A professional expert takes all technical aspects such as heat output and gas connection into account, as well as the flue gas discharge requirements. The installation manual will give you the information you need to install the appliance in such a way that it will operate properly and safely. If the installation instruction is not clear, national/local regulations must be observed.
- do not make any changes to the appliance;
- use non combustible and heat-resistant materials for the chimney breast, including the top of the chimney breast, the material in the chimney breast and the back wall against which the appliance will be placed;
- take sufficient measures to prevent temperatures of a wall behind the chimney breast becoming too high, including the materials and/or objects behind the wall;
- comply with the minimum required internal measurements of the chimney breast;
- ventilate the chimney breast by means of the ventilation holes, which will form a combined passage of at least 200 cm²;
- use a suitable flue gas discharge system that is provided with the CE mark;
- maintain a minimum distance of 10 mm between the appliance and the back wall;
- place the appliance on supports made of non combustible and heat-resistant material;
- do not cover the appliance and/or do not wrap it in an insulation blanket or any other material;
- make sure that combustible objects and/or materials have a distance from the appliance of at least 500 mm;
- the appliance was designed for atmospheric and heating purposes. This means that all visible surfaces, including the glass pane, can become hotter than 100°C°. It is recommended to always place a protective grating in front of the appliance when there are children, elderly people or handicapped persons in the same room as the appliance. If it is possible that vulnerable people are regularly present in the room with no supervision, a fixed guard should be mounted around the appliance.
- only ever use the supplied wood set;
- place the wood set exactly as described;
- make sure the pilot burner and the space around it is kept free;
- make sure there is no dirt in gas pipes and connections;
- mount a gas tap directly next to the appliance;
- check the connections for gastightness before using the appliance;

- replace a torn or broken glass pane;
- In case of a broken or torn glass pane, do not use the appliance and close the gas tap.
- remove the tape on the convection box, before you ignite the appliance;
- do not ignite the appliance until it is fully installed.

3.4 Oxypilot safety

The appliance is provided with an oxypilot safety, which will be activated if insufficient combustion air (oxygen) is supplied.

If the oxypilot safety senses insufficient oxygen, the pilot burner is switched off and the gas supply to the burner is closed.

If the supply of combustion air is sufficient again, the appliance can be restarted.

The supply of fresh air can be controlled by installing/opening ventilation holes.

! Caution

In case of a house with a mechanic exhaust system and/or an open kitchen with cooker hood, a permanent ventilation opening is required in the area surrounding the appliance; for this application, please refer to the gas installation provisions and local regulations.

4. Instructions

Observe the following items during installation in order to guarantee a proper and safe operation of the appliance:

- properly finish the edges in case of a tight construction;
- do not apply plaster on or over the flanges;
- avoid damages when removing/placing the glass pane;
- clean the glass pane before you use the appliance, in order to prevent dirt from burning in the glass.

5. Removing the packaging

Note the following items when removing the packaging:

- ! **Caution** Do not allow the appliance to rest on the lower tray (see fig. 3)
- Check the appliance and accessories for damages during transport.
- If necessary, contact DRU Service.

After removing the packaging, you should have the following components:

- Allen key; you will find it on top of the appliance;
- Plastic bag containing parts;
- Wood set;
- Plaster strip/decorative strip/front; upon request, the plaster strip, decorative strip or front will be included in the delivery.



Caution Keep all plastic bags away from children.

In appendix 1/ table 2 you can see which parts you should

have after removing the packaging.

- Contact DRU Service if you do not have all the parts after you finished removing the packaging.
- Dispose packaging in accordance with local regulations.

6. Installation

Read this manual carefully to ensure a proper and safe operation of the appliance.

!Caution Install the appliance in the order described in this chapter.

6.1 Regulations

- Observe the applicable (installation) regulations.
- Observe the regulations/instructions in this manual.

6.2 Type of gas

The data plate indicates for which type of gas, gas pressure and for which country this appliance is intended. The data plate is attached to a chain and is placed in the air slot at the left side of the appliance. It should remain connected to the chain.



Caution Check whether the appliance is suitable for the type of gas and the gas pressure used at the location.

6.3 Gas connection

Place a gas tap in the gas connection, close to the appliance.



Caution

- Make sure there is no dirt in gas pipes and connections;
- Prevent twisting the gas tap when connecting the gas pipe.

The following requirements apply to the gas connection:

- use a gas pipe with the correct dimensions, so that no pressure loss can occur;
- the gas tap should have the CE marking;
- you should always be able to reach the gas tap.

6.4 Placing the appliance

When constructed in an existing chimney (other than the class I chimney in the United Kingdom), a flexible stainless steel pipe is recommended for discharging the flue gases. In cases of construction in a mantelpiece/fireplace connected to an existing chimney in the United Kingdom (class I chimney), the separately supplied English description 'Fitting into a conventional class I chimney' also applies. In addition to the installation instructions, this booklet also contains supplementary tests. In the United Kingdom, the 'Concise installation guide' also applies.



Caution

- Make sure that combustible objects and/or materials have a distance from the appliance of at least 500 mm;
- Always place the appliance against a wall of non combustible and heat-resistant

material;

- Maintain a minimum distance of 10 mm between the appliance and the back wall;
- Take sufficient measures to prevent temperatures of a wall behind the chimney breast becoming too high, including the materials and/or objects behind the wall;
- Place the appliance on supports made of non combustible and heat-resistant material;
- Do not cover the appliance and/or do not wrap it in an insulation blanket or any other material;
- Do not make any changes to the appliance.

!Caution

- Take the minimum construction depth of the appliance into account; Global 70XT CF 350 mm (see fig. 2);
- Take the minimum construction height of the appliance into account: 180 mm (see fig. 2)

The appliance must be built tightly in the chimney breast (frameless) or provided with a decorative strip or front all around it. Upon request, the plaster strip, decorative strip or front will be included in the delivery.

Place the appliance as follows:

- Apply the plaster strip, in case of a tight construction of the appliance; also see the instructions included with the delivery.
- Determine the location of the appliance; see fig. 1 for the dimensions of the appliance.
- Determine the construction height of the appliance.
- Provide a gas connection at the location. For details, see section 6.3.
- Make a passage for the flue gas discharge system with the following diameters. For details, see section 6.5.
- Ø 110 mm for a roof terminal through non combustible material;
- Ø 200 mm for a roof terminal through combustible material.
- Place the appliance - on its intended location - on supports with the required height (see fig. 3) and
- Make the appliance level at the same time.
- Connect the gas pipe to the appliance, as described below.

The gas control can be found in the tray below the burner. In order to connect the gas pipe, you must remove the burner mounting plate.

Follow the procedure described below:

- Remove the glass pane (see section 6.8).
- Store the glass pane on a safe place.
- Remove the vermiculite tray (see fig. 4a)
- Unscrew the Allen screws at both sides of the combustion chamber using the supplied Allen key (see fig. 4b).
- Grab the combustion chamber at both sides and remove it (see fig. 4c).
- Remove the bottom strip (see fig. 4a)

- Unscrew the self-tapping screws of the burner mounting plate; see fig. 4d.
- Lift the burner mounting plate plus accessories; see fig. 4e.
- Attach the convection box to the wall, using the supplied key bolts and flat washers. Use the 4 openings in the rear wall of the convection box.
- Cut the inner ring out of the left or the right sided grommet. The grommet is placed in the bottom of the tray below the burner.
- Create a gas supply leading into the tray, under the burner. (see fig. 4h)
- If necessary, blow clean the gas pipe.
- Connect the flexible gas pipe to the gas connection with gas tap.



Caution - Avoid kinks in the pipe;

!Caution The pilot burner pipe must be protected against possible corrosion influences, e.g. moisture, falling cement, dirt falling down from a chimney, etc. The pilot burner pipe must be permanently kept free from the ground and the walls of the room in which the appliance is built.

- Bleed the gas pipe.
- Place the receiver; for details, see section 7.1 of the Installation manual.
- Set the communication code between the remote control and the receiver; see section 7.2 of the installation manual.



Caution Do not ignite the appliance until it is fully installed.

- Check the connections for gastightness as described in section 8.1 of the installation manual.
- Check the line-pressure as described in section 8.2 of the installation manual.
- Place the burner mounting plate plus accessories back and fix it with the self-tapping screws.
- When placing, slide the bottom strip in the U shaped notches to the left and right; see Fig. 4g.
- Place the combustion chamber back in the convection box and fix it at both sides with the Allen screws.



Caution - Properly connect the flue spigot to the draft diverter when placing back the combustion chamber; see Fig. 4f;

- Place the vermiculite tray in the rear of the combustion chamber.
- Place the wood set; see section 6.7
- Remove the tape on the convection box.

6.5 Flue gas discharge system

When constructed in an existing chimney (other than the class I chimney in the United Kingdom), a flexible stainless steel pipe is recommended for discharging the flue gases.

In cases of construction in a mantelpiece/fireplace connected to an existing chimney in the United Kingdom (class I chimney), the separately supplied English description 'Fitting into a conventional class I chimney' also applies. In addition to the installation instructions, this booklet also contains supplementary tests.

6.5.1 General

The appliance is of the B_{IIAS} type.

The passage to the outside is made with a roof terminal (see section 6.5.2).



Caution Use a suitable Ø100 mm diameter flue gas discharge system provided with the CE mark.

The flue gas discharge system is constructed from (the flue spigot of) the appliance.

6.5.2 Connecting the flue gas discharge system

A discharge pipe of at least 3 metres, should be connected to the appliance.

Bends in the flue gas discharge system are not allowed.

The roof terminal can end in a sloping and a flat roof.

The roof terminal can be supplied with an adhesive plate for a flat roof or with a universally adjustable tile for a sloping roof.



Caution - Maintain a distance of at least 50 mm between the outside of the flue gas discharge system and the walls and/or the ceiling. If the system is built in (for instance) a cove, it should be made with non combustible material all around it;
- Use heat-resistant insulation material when passing through combustible material.

!Caution Some heat-resistant insulation materials contain volatile components that will spread an unpleasant smell for a prolonged time; these are not suitable.

Place the flue gas discharge system as follows:

- Build the system up from (the flue spigot of) the appliance.
- Connect the pipe pieces.
- Apply sufficient clamps, so that the weight of the pipes does not rest on the appliance.
- Determine the remaining length of the roof terminal.
- Make sure the roof terminal has the right dimensions.

!Caution Make sure that the right insertion length is maintained.

- Connect the roof terminal to the discharge pipes.

- !Caution**
- Make sure that the universal tile fits well with the surrounding tiles;
 - Make sure that the adhesive plate fits well onto the flat roof.

6.6 Placing the chimney breast

This section describes how the Global 70XT CF is built into a chimney breast. In order to provide proper heat discharge, there should be sufficient space around the appliance. The chimney breast should be ventilated sufficiently by means of ventilation holes. No ventilation is required in case of an existing chimney with a masoned fireplace that is sufficiently able to absorb the heat. Of course, the ventilation hole does also not apply to the class I chimney in the United Kingdom.

- !Caution**
- Use non combustible and heat-resistant materials for the chimney breast, including the top of the chimney breast, the material in the chimney breast and the back wall of the chimney breast;
 - Make sure that the appliance is not carrying the weight of the chimney breast when using stone-like materials;
 - The ventilation holes – which should be mounted as high as possible – should have a combined passage of at least 200 cm².
- !Caution**
- Take the minimum internal width of the chimney breast into account: 750 mm (see fig. 2);
 - When placing the chimney breast, you should take the location of the ventilation holes (V) into account (see fig. 2).

!Tip You should preferably apply the ventilation holes on both sides of the chimney breast. You can use DRU ventilation elements.

- Check whether the flue gas discharge system is placed correctly.
- Check the fixture of the clip binding with self-tapping screws on places that cannot be reached later on.
- Do not apply plaster on or over the flanges (see fig. 2, maximum plaster line M), because the heat of the appliance could cause cracks.
- If necessary, place the decorative strip or front around the appliance; also see the instructions included with the delivery.
- When using stone-like materials and/or plaster finishing, the chimney breast should dry for at least 6 weeks before it is taken into operation, in order to prevent cracks.

6.7 Placing the wood set

The appliance is supplied with a wood set.



- Caution** Strictly observe the following instructions to prevent unsafe situations:
- only ever use the supplied wood set;
 - place the wood set exactly as described;
 - make sure the pilot burner and the space around it are kept free from objects (see fig. 5a);
 - make sure thermocouple 2 and the surrounding space remain free (see fig. 5a)
 - make sure there is no vermiculite's fine dust on the burner.

6.7.1 Wood set

The wood set consists of black vermiculite (see fig. 6a), chips (see fig. 6b) and four logs.

- Fill the burner tray with vermiculite; equally spread the vermiculite.

- !Caution**
- You can influence the flame image by moving the vermiculite, yet
 - the burner deck has to remain covered with vermiculite in order to prevent that the life expectancy of the burner is reduced.
- Identify logs A up to D by using fig. 7a.

!Tip Use the burn stains on the logs for identification.

- Successively place log A (rear log), log B (middle log) and log C (right log); see fig. 7b to 7h.

!Caution Use the placement brackets as indicated in the figures.

- Fill the tray surrounding the burner with chips; equally spread the chips; see fig. 7j.
- Finally place log D, the left log; see fig. 7k.

6.8 Glass pane

After placing the wood/pebble set you can place the glass pane, as described below.

- !Caution**
- Avoid damages when removing/placing the glass pane;
 - Use the Allen key supplied for loosening/tightening the Allen screws.

6.8.1 Removing the glass pane

Remove the glass pane in accordance with the following instructions (zie fig. 10a up to fig. 10d)

- Loosen the Allen screws in the upper glass strip by one or two strokes.
- Grab the upper glass strip at both sides.
- Pull the glass strip to the front and
- Push it upwards.
- Slightly tilt the top of the glass pane towards you.
- Grab the glass pane at both sides.
- Remove the glass pane from the lower glass strip.

6.8.2 Placing the glass pane

- Place the glass pane in the lower glass strip.
- Pull the upper glass strip to the front and
- Push it upwards.
- Tilt the top of the glass pane away from you.
- Place the upper glass strip over the glass pane.
- Push on the upper glass strip.
- Retighten the Allen screws

- !Caution**
- Avoid/remove fingerprints on the pane, since otherwise they will burn into the surface;
 - The Allen screws must not be over-tightened, since otherwise they could strip the thread: tight=tight;

7. Wireless remote control

The appliance is supplied with a wireless remote control. Ignition, controlling the flame height and switching off are performed by a remote control that operates a receiver. **User Manual**, chapter 4, Wireless Remote Control, describes the operation of the appliance including the way the remote control works.



- Caution** Do not ignite the appliance until it is fully installed.

7.1 Connecting the receiver

The receiver should be connected to the appliance, before the batteries are installed.

The receiver will be placed in the tray below the burner.

Follow the procedure below (see fig. 11a):

- Fit the connection cable's brown plug to the receiver (see fig. 11a, arrow F).
- Connect the white plug to the gas control.

- !Tip** The plugs have different sizes that correspond with the connectors.

- Connect the cables of the thermocouple to the receiver; (see fig. 11a, arrows B).

- !Tip**
- The size of the eye corresponds with the size of the screw;
 - The colours of eye and screw also correspond.

- Connect the black wire with the white plug of thermocouple 2 to the receiver (see fig. 11a, arrow E).

- !Caution**
- Make sure that the wires of thermocouple 2 cannot come into contact with hot parts;
 - Make sure the ignition cable cannot come into contact with other wires.

- Connect the ignition cable to the receiver; (see fig. 11a, arrow A).

- !Caution** The battery holder is lying in a small tray at the bottom of the slot between the combustion chamber and the convection box.

- Connect the cable of the battery holder to the receiver (see fig. 11a, Arrow C and fig. 11b).
- Place the receiver in the tray below the burner and bend the clip (see fig. 11b, Arrow).

- !Caution** First read section 7.1.1 and 7.2 before bending the clip.

- Bend the antenna out of the clips; see fig. 11a, arrow D.
- Set the antenna straight.

- !Caution**
- Do not place the antenna too close to the ignition cable and/or metal parts;
 - Do not place the ignition cable over and/or along metal parts: this will weaken the spark;
 - Do not lay the ignition cable over the receiver: this could damage the receiver;
 - Avoid dust on or in the receiver: cover it when performing work.

7.1.1 Placing/replacing receiver's batteries

The batteries should be placed in the special battery holder and not in the receiver.



- Caution** Strictly observe this, to avoid damages to the receiver.

The battery holder is lying in a small tray at the bottom of the slot between the combustion chamber and the convection box. By pulling the (guide) ribbon towards you, the battery holder will appear. (see **User Manual**, fig. 1 and fig. 2a up to 2d).

To place/replace the batteries, proceed as follows:

- Pull the (guide) ribbon towards you.
- Grab the battery holder.
- Loosen the screw.
- Slide the cover off.
- Remove and place the 4 penlite (AA type) batteries.

- !Caution**
- Avoid a short circuit between the batteries and metal objects/parts;
 - Observe the "+" and "-" poles of the batteries and the holder;
 - Use alkaline batteries;
 - Batteries are regarded as "small chemical waste" and may therefore not be disposed with the household rubbish.

- Slide back the cover.
- Tighten the cover.
- Place back the holder.

!Caution Make sure the guide ribbon is under the holder.

7.2. Setting the communication code

Prior to putting the appliance into operation, a communication code must be set between the remote control and the receiver.

When installing a new receiver or remote control, you must set a new communication code.

The code is chosen randomly from the 65000 available codes. As a result, the chance that other remote controls near you are using the same code and affect the operation of your appliance is very small.

Follow the procedure described below:

- If necessary, place the receiver's batteries in the battery holder; see section 7.1.1.
- If necessary, place the remote control's 9V block battery; see **User Manual**, section 4.2.6
- Remove the receiver from the tray below the burner; if necessary see section 7.3.
- Hold down the reset button on the receiver, until you hear two consecutive sound signals (see fig. 12).
- After the second, longer signal, let go of the reset button.
- Press the 'small flame' button on the remote control for 20 seconds, until you hear two short sound signals: this is the confirmation of a good communication.

7.3 Replacing the receiver

The receiver can be replaced as follows:

- Remove the glass pane; see section 6.8.
- Store the glass pane on a safe place.
- Remove the vermiculite tray in the rear of the combustion chamber (see fig. 4a).
- Unscrew the Allen screws at both sides of the combustion chamber using the supplied Allen key (see fig. 4b).
- Grab the combustion chamber at both sides and remove it (see fig. 4c).
- Remove the bottom strip (see fig. 4a).
- Unscrew the self-tapping screws of the burner mounting plate; see fig. 4d.
- Lift the burner mounting plate plus accessories and remove the receiver from the tray; see fig. 4e.
- Replace the receiver and reconnect it (see section 7.1).
- Set the communication code (see section 7.2).
- Place the parts back in reverse order of the steps described above.

!Caution

- Properly connect the flue spigot to the draft diverter when placing back the combustion chamber; see fig. 4f;
- When placing back, slide the bottom strip in the U shaped notches to the left and right; see fig. 4g.

8. Final check

In order to check whether the appliance is working properly and safely, you must perform the following checks before the appliance is used.

8.1 Gastightness



Caution All connections must be gastight.

!Caution The gas control can be subjected to a maximum pressure of 50 mbar.

- Check the connections for gastightness

8.2 Gas pressure / line-pressure

The burner pressure is set at the factory; see data plate. It is not necessary to check the burner pressure.



Caution The line-pressure in house installations should be checked, as they can vary.

The gas control can be found in the tray below the burner.

Observe the following steps to check the line-pressure:

- Remove the glass pane; see section 6.8.
- Store the glass pane on a safe place.
- Remove the vermiculite tray in the rear of the combustion chamber (see fig. 4a).
- Unscrew the Allen screws at both sides of the combustion chamber using the supplied Allen key (see fig. 4b).
- Grab the combustion chamber at both sides and remove it (see fig. 4c).
- Remove the bottom strip (see fig. 4a).
- Unscrew the self-tapping screws of the burner mounting plate; see fig. 4d.
- Lift the burner mounting plate plus accessories; see fig. 4e.
- Check the line-pressure; see fig. 13 for the measuring nipple on the gas control.
- Contact the gas company if the line-pressure is not correct.
- Place the parts back in reverse order of the steps described above.

!Caution

- Properly connect the flue spigot to the draft diverter when placing back the combustion chamber; see fig. 4f;
- When placing back, slide the bottom strip in the U shaped notches to the left and right; see fig. 4g.

8.3 Ignition pilot and main burner

For igniting the pilot and main burners, see the **User Manual**, chapter 4, section 4.2, Remote Control.



Caution

- Always wait 5 minutes after the pilot burner has gone out, before you re-ignite the appliance.
- Do not turn the pilot burner lower by using the settings on the gas control.

8.3.1 Pilot burner

- Check the ignition of the pilot burner:
 - the pilot burner should start at the first attempt.
- If the pilot burner does not ignite:
 - check if the ignition sparks:
 - a) If not, check if the ignition cable is properly connected between receiver and pilot burner; see section 7.1 for accessibility;
 - b) If it does, there is probably still air in the pipe.
 - Bleed the pipe and/or
 - Connect the ignition cable properly.

8.3.2 Main burner



Caution The burner should ignite smoothly and should not pop as a result of delayed ignition.

- Check the function of the main burner from the standby (pilot burner) position:
 - after opening the gas valve, the main burner should burn within a few seconds.

!Tip When the gas valve is opened, the motor will run; this is audible.

- 1) If the main burner does not burn:
 - Check if the space surrounding the pilot burner is free from objects;
 - Check the placement of the wood set.
 - If necessary, correct the above mentioned faults.
 - Test the main burner 5x for a good operation.
- 2) If the main burner ignites, but goes out again after approx. 22 seconds, please:
 - Check the wiring of thermocouple 2 for:
 - Loose wiring;
 - Wrongly connected wiring;
 - Short-circuit;
 - Broken wire.
 - Check if thermocouple 2 is dirty.
 - Check if thermocouple 2 is positioned correctly in the flame; see fig. 5b.
 - Check if thermocouple 2 is defective; see chapter 11, table 4 under J7.
 - Check if the receiver is defective; see chapter 11, table 4 under J8.
 - If necessary, correct the above mentioned faults.
 - Test the main burner 5x for a good operation.

8.4 Flame image

The flame image can only really be assessed when the appliance has been burning for several hours. Volatile components from paint, materials, etc., which evaporate in the first hours, will affect the flame image.

!Caution

If the chimney breast is made of stone-like materials or has a plaster finish, this may only take place 6 weeks after placing the chimney breast, in order to prevent shrinkage cracks.

- Check whether the flame image is acceptable. If the flame image is not acceptable, this can be due to:
 - the evaporation of volatile substances;
 - incorrect placement of the wood set.
 - If necessary, improve the placement of the wood set.

9. Maintenance

Once a year the appliance should be checked, cleaned and, if necessary, repaired by a competent installer in the field of atmospheric gas-fired heating. Check at least whether the appliance is working properly and safely.



- Caution**
- Close the gas tap when performing maintenance work;
 - Check the gastightness after repair;
 - After replacing the thermocouple you should first tighten the swivel by hand and then give it another quarter turn with a suitable spanner;
 - Do not turn the pilot burner lower by using the settings on the gas control.
- If required, clean the following components:
 - the pilot burner;
 - the space surrounding the pilot burner;
 - thermocouple 2
 - the glass pane.

!Caution

- Remove/place the glass pane as described in section 6.8;
- Remove the deposit on the inside of the glass pane with a damp cloth or a non-abrasive detergent such as copper polish;
- Avoid/remove fingerprints on the glass pane, since otherwise they will burn into the surface;
- Replace a broken and/or cracked glass pane, as described in section 6.8.



Caution If necessary, place back the wood set correctly; for this, see section 6.7.

- Inspect the flue gas discharge system.



Caution You must always perform a final check.

- Perform a check as described in chapter 8.

9.1 Parts

Parts that must be replaced, can be obtained from your supplier.

10. Delivery

You must explain to the user how he should operate the appliance. You should instruct her/him for instance on using the appliance for the first time, the operation of the remote control, annual maintenance.



Caution

- Tell the user to close the gas tap immediately in case of malfunctions/bad performance and contact the installer in order to prevent dangerous situations;
- Indicate the location of the gas tap;
- Point out the precautions in the user manual concerning unintended ignition by other remote controls such as car keys and garage door openers.

- Instruct the user about the appliance and the remote control.
- When the appliance is started for the first time, point out that
 - in order to avoid cracks in a chimney breast made of stone-like materials or finished with plaster, it should dry for at least 6 weeks prior to putting the appliance into operation
 - when the appliance is stoked up for the first time, volatile components evaporate from paint, materials, etc.;
 - when evaporating, the appliance should preferably be set at the highest level;
 - the room should be well ventilated.
- Give this booklet containing the manuals to the user (the booklet should be kept near the appliance).

11. Malfunctions

In the following table you will find an overview of malfunctions that might occur; the possible causes and the remedies.

Parts like the gas control, the receiver and the ignition cable can be found in the tray below the burner; see section 8.2 respectively section 7.3 for accessibility.

Table 1: Diagnosis of malfunctions

PROBLEM	POSSIBLE CAUSE	REMEDY
A. No transmission (motor will not run)	1. The new communication code between receiver and remote control must still be confirmed. 2. Empty batteries. 3. Receiver is damaged. 4. Remote control is damaged. 5. Motor cable at valve/receiver is broken. 6. Bent pins of the 8-wire connector. 7. Poor reception.	1. Set the communication code again (see section 7.2). 2. Replace batteries. !Caution Avoid short circuit between the batteries and metal parts of the appliance. 3. Replace the receiver and confirm the code (remedy 1). 4. Replace the remote control and confirm the code (remedy 1). 5. Replace the motor cable. 6. Make sure that the pins of the 8-wire connector are straight. 7. Change the position of the antenna.
B. No ignition (spark)	1. Button A in position MAN. 2. Ignition cable not connected properly. 3. Ignition pen corroded. 4. 60-second delay before the full restart is not yet finished.	1. Switch button A on the gas control to ON, see fig. 14. 2. Properly connect the ignition cable. If necessary, replace the ignition cable. 3. Replace the ignition pen. 4. Wait until the delay time has passed.
C. No sound signal	1. Receiver is damaged. 2. 60-second delay before the full restart is not yet finished.	1. Replace the receiver and confirm the code (remedy 1 at A) 2. Wait until the delay time has passed.
D. One continuous sound signal of 5 sec. (Possible 7 short beeps prior to the 5 sec. sound signal)	1. Loose wiring between receiver and gas control. 2. Receiver is damaged. 3. Bent pins of the 8-wire connector. 4. Damaged magnetic valve.	1. Connect the wiring properly. 2. Replace the receiver and confirm the code (remedy 1 at A) 3. Make sure that the pins of the 8-wire connector are straight. 4. Replace the gas control.
E. No pilot burner flame	1. Air in the pilot burner pipe. 2. Wires of thermocouple have been cross-connected.	1. Flush the pipe or start the ignition process several times. 2. Check the polarity of the thermocouple wiring. Connect the thermocouple wiring properly, if necessary.

PROBLEM	POSSIBLE CAUSE	REMEDY
	3. No spark at the pilot burner. 4. Injector is blocked up.	3.1 Check if the ignition cable is connected properly. If necessary, connect it properly. 3.2 If necessary, replace the ignition cable. 3.3 If necessary, replace the ignition pen. 4.1 Clean the injector. 4.2 If necessary, replace the injector.
F. Electronics keep sparking while the pilot burner is ignited	1. Receiver is damaged.	1. Replace the receiver and confirm the code (remedy 1 at A)
G. Pilot burner is burning, but magnetic valve closes after ca. 10 seconds or when the appliance gets hot	1. Thermocouple does not function. 2. Batteries (almost) empty.	1.1 Measure the voltage, using a digital multimeter, set to mV range, by connecting the cables to the cable shoe. The cable shoe is located on the outside, directly next to the magnet nut at the rear of the gas control; see fig. 15. The voltage should be at least 5mV within 20 seconds. It may not be lower when the appliance is warm. If the voltage is too low: - the thermocouple should be placed better in the flame or - the thermocouple should be replaced. 1.2 Check the size of the pilot burner flame. Correct a flame that is too small. 1.3 Check the wiring of the thermocouple to the receiver. If necessary, replace the wiring. 2. Replace the receiver's batteries. !Caution Avoid short circuit between the batteries and metal parts of the appliance.
H. There are short sound signals, but no sparks and no sound / clicks can be heard of the magnet opening the valve	1. Batteries (almost) empty.	1. Replace the receiver's batteries. !Caution Avoid short circuit between the batteries and metal parts of the appliance.
I. Pilot burner is burning, but there is no gas flow to the main burner	1. Button A in position MAN. 2. Appliance in the pilot flame position. 3. Line-pressure of the gas is too low. 4. Damaged magnetic valve.	1. Turn button A on the gas control to ON; see fig. 14. 2. Increase the flame height by pressing button  (large flame) on the remote control. 3. Check line-pressure. If necessary, contact gas company. 4. Replace the gas control.

PROBLEM	POSSIBLE CAUSE	REMEDY
J. Main burner ignites, but goes out again after approx. 22 seconds	1. Wiring of thermocouple 2 is loose. 2. Wires of thermocouple 2 have been cross-connected. 3. Short-circuit in the wiring of thermocouple 2. 4. Broken wire in the wiring of thermocouple 2. 5. Thermocouple 2 is dirty. 6. Thermocouple 2 is not positioned correctly in the flame (see fig. 5b.) 7. Thermocouple 2 is defective. 8. Receiver is defective.	1. Connect the wiring properly. 2. Connect the wiring properly. 3. Replace wiring. 4. Replace wiring. 5. Clean the thermocouple. 6. Position the thermocouple correctly in the flame. 7. Check the voltage across thermocouple 2 just before the main burner goes out. If the voltage is lower than 1.8 mV, replace thermocouple 2. 8. Check the voltage across thermocouple 2 just before the main burner goes out. If the voltage is higher than 1.8 mV, replace the receiver.

In the following table you can find the parts that are supplied with the appliance.

Table 2: Parts included with the delivery

Part	Quantity
Wood set	1x
Plaster strip/decorative strip (Frame Alpha)/front (Frame Bèta)*	1x
Booklet containing the manuals	1x
Concise installation guide**	1x
Installation instructions for fitting into a conventional class I chimney**	1x
Foam seal**	
Debris shield**	1x
Key bolts M6	4x
Hexagonal nut M6	4x
Washer	4x
Spare Allen screws for mounting the glass pane	3x
Allen key 5 mm	1x
Remote control	1x
9V block battery	1x
Penlite battery (AA type)	4x
* upon request, the plaster strip, decorative strip or front will be included in the delivery	
** only intended for the United Kingdom	

In the following tables you will find the technical data for the Global 70XT CF.

Table 3: Technical data

Model identifier(s):		Global 70XT CF RCE			
Type		B11AS			
Category		I2EK / I2E / I2E+ / I2H / I2ELL / I3P			
Gastype:	Symbol	G25/ G25.3*	G20	G31	Unit
Indirect heating functionality		No	No	No	-
Direct heat output		4,6	4,7	4,8	kW
Indirect heat output		-	-	-	kW
Space heating emissions NO _x		116,7	119,2	86,8	mg/kWh _{input} (GCV)
Heat output					
Nominal heat output	P _{nom}	4,6	4,7	4,8	kW
Minimum heat output (indicative)	P _{min}	2,0	2,0	2,9	kW
Technical data					
Nominal heat input (Hs)		6,7	6,9	6,9	kW
Nominal heat input (Hi)		6,0	6,2	6,3	kW
Consumption max		712	657	252	l/h
Consumption min		317	297	147	l/h
Burner pressure max		18,2	14,5	27,0	mbar
Burner pressure min		3,9	3,2	9,8	mbar
Main burner injector		7x Ø 0,81	7x Ø 0,81	7x Ø 0,55	mm
Low setting injector		Ø 1,45	Ø 1,45	Ø 1,10	mm
Efficiency class (EN613)		2	2	2	-
Useful efficiency (NCV)					
Useful efficiency at nominal heat output	η _{th, nom}	76,4	77,4	76,9	%
Useful efficiency at minimum heat output (indicative)	η _{th, min}	72,9	70,9	75,0	%
Auxiliary electricity consumption					
At nominal heat output	el _{max}	-	-	-	kW
At nominal heat output	el _{min}	-	-	-	kW
In standby mode	el _{SB}	-	-	-	kW
Permanent pilot flame power requirement					
Pilot flame power requirement (if applicable)	P _{pilot}	-	-	-	kW
Energy efficiency					
Energy efficiency index	EEl	76	77	77	
Energy efficiency class		D	C	C	

Type of heat output / room temperature control	
Single stage heat output, no room temperature control	No
Two or more manual stages, no room temperature control	No
With mechanic thermostat room temperature control	Yes
With electronic room temperature control	Yes
With electronic room temperature control plus day timer	Yes
With electronic room temperature control plus week timer	Yes**
Other control options (multiple selections possible)	
Room temperature control, with presence detection	Yes**
Room temperature control, with open window detection	Yes**
With distance controle option	Yes

* This appliance is suitable for G25.3 with the composition according NTA 8837.

** To be used by means of home automation.

Contents

Preface	40	4. Wireless remote control	41
1. Introduction	40	4.1 Replacing receiver's batteries.....	41
2. SAFETY	40	4.2 Remote control	42
2.1 General.....	40	5. Maintenance	45
2.2 Precautions / safety instructions.....	40	6. Environment	45
3. Taking the appliance in operation	40	6.1 General.....	45
3.1 For the first time.....	40	6.2 Appliance	45
3.2 Protection.....	41	7. Warranty	45
3.3 Discoloration of walls and ceilings.....	41		

Preface

DRU, a manufacturer of gas-fired heating appliances, develops and produces products that comply with the highest quality, performance and safety requirements.

This will enable you to enjoy using this product for many years to come.

The appliance is provided with a CE mark. Gas-fired appliances that comply with the requirements for safety, environment and energy consumption (the so-called essential requirements) of the European gas appliance directive, are entitled to carry the CE mark.

Your appliance should be installed and maintained by a competent installer in the field of atmospheric gas-fired heating.

Two manuals are supplied with the appliance: the installation manual and the user manual. These have been included in one booklet.

The user manual will give you the information you need to operate the appliance properly and safely.

Carefully read this user manual prior to using the appliance.

Keep the booklet containing the manuals in a safe place.

As a user you are only entitled to perform the work described in the user manual. Any other work requires a competent installer.

In case of questions or doubts, please contact your installer.

The following symbols are used in the manual to indicate important information:

- Work to be performed.
- !Tip** Suggestions and recommendations.
- !Caution** You will need these instructions to prevent problems that might occur during installation and/or use.
-  **Caution** You need these instructions to prevent fire, personal injury or other serious damages.

1. Introduction

Your appliance is an open-flued atmospheric gas-fired heating appliance. An open-flued appliance draws its combustion air from the living area. For that reason, it is important that the living area is properly ventilated.

For a safe operation of the appliance, an oxypilot safety is installed. If the supply of fresh air is insufficient, the oxypilot will interfere and switch off the appliance.

The appliance is operated by means of a wireless remote control that works on batteries.

2. Safety

2.1 General



- Caution**
- Carefully read this chapter on safety;
 - Observe the precautions/instructions in this manual.

2.2 Precautions / safety instructions

Carefully observe the following precautions/regulations:

- installation and maintenance of the appliance should be performed by a professional certified expert with proven knowledge and demonstrable competence in this field. A professional expert takes all technical aspects such as heat output and gas connection into account, as well as the flue gas discharge requirements. The installation manual will give you the information you need to install the appliance in such a way that it will operate properly and safely. If the installation instruction is not clear, national/local regulations must be observed.
- do not make any changes to the appliance yourself;
- have your appliance maintained for at least 1x per year;
- close the gas tap if the appliance ignites with a pop sound and/or poorly and contact the installer;
- close the gas tap in case of malfunctions and/or poor performance of the appliance and contact the installer;
- a torn or broken pane should be replaced immediately;
- make sure there is sufficient ventilation in the room where the appliance is installed;
- make sure that combustible objects and/or materials such as curtains have a distance from the appliance and/or the flues of at least 50 cm;
- do not dry clothes, towels etc. on and/or near the appliance, in order to prevent fire;
- avoid contact with hot parts of the appliance to prevent burns;
- do not leave children and persons who cannot judge the consequences of their actions alone with a burning appliance;
- place the remote control out of reach from children and persons who cannot properly judge the consequences of their actions.

3. Taking the appliance in operation

3.1 For the first time

When using a chimney breast, it has to be dry before you take the appliance into operation. This is to prevent shrinkage cracks.

- !Caution**
- If the chimney breast is made of stone-like materials or has been finished in stucco, it should be left to dry for at least 6 weeks prior to taking it into operation.

When the appliance is stoked up for the first time, an unpleasant smell may occur as volatile components evaporate from paint, materials, etc. This may take a number of hours.

!Caution

- Pets and birds in particular can be sensitive to the vapours that are released;
- In the beginning the flame image is affected by the evaporation of volatile components.

!Tip

- Set the appliance to its highest level to speed up the evaporation process;
- Keep the room well ventilated;
- Remove pets from the room.

3.2 Protection

To prevent unsafe situations, you should carefully observe the following measures/instructions.



Caution

- Make sure there is sufficient ventilation in the room where the appliance is installed;
- Make sure that combustible objects and/or materials such as curtains have a distance from the appliance and/or the flues of at least 50 cm;
- Do not dry clothes, towels etc. on and/or near the appliance, in order to prevent fire;
- Avoid contact with hot parts of the appliance to prevent burns;
- Do not leave children and persons who cannot judge the consequences of their actions alone with a burning appliance;
- Place the remote control out of reach from children and persons who cannot properly judge the consequences of their actions.

3.3 Discoloration of walls and ceilings

A brown discoloration is an unpleasant and difficult to solve problem. Brown discoloration can be caused by burning substances as a result of insufficient ventilation, smoking, burning candles, oil lamps, etc. Cigarette and cigar smoke contain tar substances that are deposited on colder walls. These problems can be (partly) solved through a proper ventilation of the room where the appliance is placed.


4. Wireless remote control

The appliance is supplied with a remote control. Ignition, controlling the flame height and switching off are performed by the remote control that operates a receiver. The receiver and remote control are battery powered. The receiver requires 4 penlite (AA type) batteries, the remote control requires a 9V block battery. At normal use, the batteries will have an average life of one year. You can also use an optional adapter. Ask your installer for information. In that case you will need a 230V connection near your appliance.

4.1 Replacing receiver's batteries

If the receiver's batteries are almost empty, you will hear 3 short beep sounds, provided the little motor for controlling the main burner is running (see section 4.2.1.1).

The batteries are in a battery holder. The battery holder is lying in a small tray at the bottom of the slot between the combustion chamber and the convection box (see fig. 1). By pulling the (guide) ribbon towards you, the battery holder will appear. (see fig. 2a up to 2d).

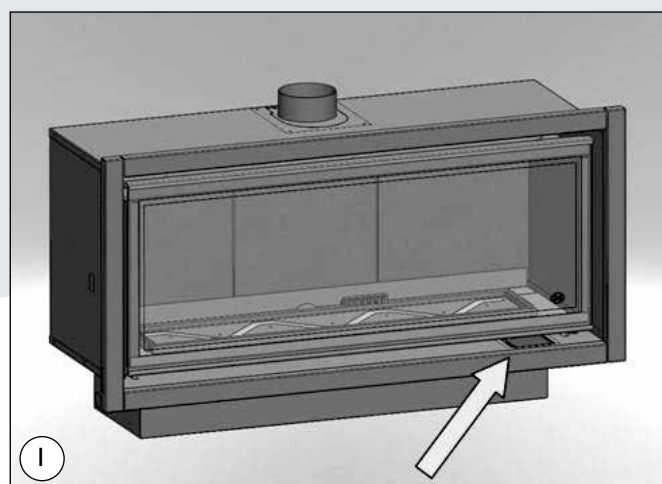



To replace the batteries, proceed as follows:

- Pull the (guide) ribbon towards you.
- Grab the battery holder.
- Loosen the screw.
- Slide the cover off.
- Remove and place the 4 penlite (AA type) batteries.

- !Caution**
- Avoid a short circuit between the batteries and metal objects/parts;
 - Observe the “+” and “-” poles of the batteries and the holder;
 - Use alkaline batteries;
 - If no good batteries are available, you must close the gas tap of the pipe to the appliance.
 - Batteries are regarded as “small chemical waste” and may therefore not be disposed with the household rubbish.

- Slide back the cover.
- Tighten the cover.
- Place back the holder.

- !Caution** Make sure the guide ribbon is under the holder.

4.2 Remote control

The appliance's standard functions such as ignition, controlling the flame height, standby (pilot burner) position and switching off are performed in the MAN position, the manual control of the remote control (see fig. 3).



In addition, the remote control can also be used to set a number of additional functions:

- temperature display in degrees Celsius or Fahrenheit;
- time;
- thermostat function;
- timer for thermostat function.



Caution

Although highly improbable, we cannot rule out that your appliance's ignition process can be started unintentionally through other remote controls. This could be the remote control of your neighbours' gas heater, but also car keys and garage door openers. The result will be that your appliance will burn when you do not want it to.

Unintended ignition of your appliance could be solved/prevented by closing the gas tap near your appliance. This is the safest precaution, if the appliance will not be used for a longer period.

Observe stated precautions / safety instructions - even if the appliance is not in use.

4.2.1 MAN position

By briefly pressing the SET button, you will go through the following functions:

MAN → * TEMP → ⤵ TEMP → (P*)TIMER → MAN
where, depending on the timer setting:
(P*) is displayed as P1 *, P1 ⤵, P2 *, P2 ⤵

!Tip

You can also go back to the MAN position by pressing the button 🔥 (large flame) or 🔥 (small flame).

!Caution

- When pressing the buttons (with the exception of the SET button), the transmission symbol (📶) will appear to indicate that transmission is taking place between the remote control and the receiver;
- The receiver acknowledges the transmission with a sound signal;
- The appliance will automatically enter the standby position, if there is no transmission for 6 hours.

- Set the remote control to the MAN position.

4.2.1.1 Ignition**Caution**

- Always wait 5 minutes after the pilot burner has gone out, before you re-ignite the appliance;
- When using propane you must be extra careful. The pilot burner may extinguish due to air in the pipe, e.g. as a result of replacing a propane cylinder: Always strictly observe a 5 min. waiting time before restarting the ignition process;
- Close the gas tap in case of malfunctions and/or poor operation and warn the installer.

!Tip

For propane appliances, please use a system of two cylinders provided with an automatic switch to the back-up cylinder, if separate gas cylinders are used.

Ignite the appliance as follows:

- Simultaneously press the buttons OFF and 🔥 (large flame) on the remote control.
- Let go of the buttons when a short sound signal indicates that the ignition process has been started.

In succession:

- the continuous signals will indicate that the ignition process is active;
- a short sound signal will indicate that the ignition process has finished;
- the appliance will automatically switch through to the highest position of the main burner, which will start to burn in a few seconds.

**Caution**

- If the pilot burner is not burning after 3 ignition attempts, you must close the gas tap and call the installer;
- When igniting the pilot burner, you will hear sound signals. After the last short sound signal, the main burner should be largely ignited within about 10 seconds. If this is not the case, you must close the gas tap and warn your installer;
- If the appliance ignites with a pop sound, you must close the gas tap and contact your installer.

!Tip

A little motor will start to run when the main burner operates, you will be able to hear it.

4.2.1.2 Flame height / standby

The flame height can be adjusted continuously by using the buttons 🔥 (small flame) and 🔥 (large flame). By continuing to lower the flame height, the appliance can be set to the standby position; this means that only the pilot burner will still be burning.

- Press button 🔥 (small flame) to lower the flame height and/or to set the appliance in the standby position.
- Press the button 🔥 (large flame) to raise the flame height and/or to switch on the main burner from the standby (pilot burner) position.

**Caution**

- If you continue to press down button 🔥 (large flame) on the remote control, the main burner should be largely ignited within about 10 seconds. If this is not the case, you must close the gas tap and warn your installer;
- If the appliance ignites with a pop sound, you must close the gas tap and contact your installer.

4.2.1.3 Switching off

Switch the appliance off by pressing the OFF button. The pilot burner will also go out.

4.2.2 Temperature display

The room temperature can be indicated on the display in degrees Celsius (°C) using a 24 hour clock or degrees Fahrenheit (°F) using a 12 hour clock.

- Simultaneously press OFF and 🔥 (small flame), until the correct display appears.

4.2.3 Time

The display can indicate time.

After placing the battery or simultaneously pressing 🔥 (large flame) and 🔥 (small flame), the time indication will flash on the display and you will be able to adjust the time.

- Simultaneously press 🔥 and 🔥 until the time indication flashes on the display.
- Press the button 🔥 (large flame) to set the hours.
- Press the button 🔥 (small flame) to set the minutes.
- Press OFF to return to the MAN position, or wait for the system to automatically return to the MAN position.

4.2.4 Thermostat function

Using the thermostat function you can set two temperatures, which can be controlled thermostatically.

These temperatures are referred to as day temperature and night temperature.

The ☀ TEMP and 🌙 TEMP symbols on the display refer to day and night temperature respectively.

The room temperature is compared to the set day/night temperature and then the flame height is automatically

controlled in order to reach the set temperature.
To be able to use the day/night temperature function, the appliance must be in the standby position.

- !Caution**
- Always leave the remote control at the same place, so that the thermostat is able to 'feel' the room temperature;
 - Make sure this place is free from influences such as draught, heat from radiators and direct sunlight.

Example

By using the *** TEMP** function you can keep the day temperature at 20 °C; while you use the **▷ TEMP** function at night to maintain a temperature of 15 °C.

4.2.4.1 Setting day/night temperature

By using the SET button, you will go through the following functions:

MAN → *** TEMP** → **▷ TEMP** → (**P***) **TIMER** → MAN

- Briefly press the SET button to enter the *** TEMP** or the **▷ TEMP** position.
- Press the SET button until the temperature on the display flashes.
- Set the required temperature by using the buttons **↕** (large flame) and **↕** (small flame).

- !Caution**
- The minimum temperature you can set is 5 °C / 40 °F;
 - Control of the night temperature is switched off by lowering the temperature until two stripes ("--") appear on the display.

- Press the OFF button or wait until position *** TEMP** or **▷ TEMP** appears on the display.

4.2.4.2 Activating the thermostat function

For activating the thermostat function, you must proceed with the following steps:

- Place the appliance in the standby (pilot burner) position using button **↕** (small flame).
- Set the day/night temperature.
- Choose the *** TEMP** or **▷ TEMP** function using the SET button.

4.2.5 Timer for thermostat function

Using the timer enables you to set two times per 24 hours for switching on the day temperature and two times per 24 hours for switching on the night temperature.

In order to control the night temperature, it should be set to at least 5 °C / 40 °F.

If the night temperature is set to the "--" position, the appliance will remain in the standby position. The appliance will only switch on at the next switch-on time of the day temperature.

The appliance must be in standby position in order to be controlled by the timer.

Example of switch times

You have set a day temperature and night temperature of, for example, 20 °C and 15 °C.

P1 *** TIMER** = 7 hours; the temperature will go to 20 °C at 7 am.

P1 **▷ TIMER** = 9 hours; the temperature will go to 15 °C at 9 am.

P2 *** TIMER** = 17 hours; the temperature will go to 20 °C at 5 pm.

P2 **▷ TIMER** = 22 hours; the temperature returns to 15 °C at 10 pm.

4.2.5.1 Setting times for the timer

To set the timer, proceed as follows:

- Set the day and night temperature as described above at section 4.2.4.1.
- Briefly press the SET button to enter the (**P***) **TIMER** position.
- Press the SET button until P1 *** TIMER** is displayed and the time flashes.
- Set the first switch on time of the day temperature using the buttons **↕** (large flame) and **↕** (small flame).
- Briefly press the SET button to set the next time of the cycle, P1 **▷ TIMER**.
- Successively set the times P2 *** TIMER** and P2 **▷ TIMER**.
- Press the OFF button or wait until position (**P***) **TIMER** appears on the display.

4.2.5.2 Activating the timer function

Follow the steps below for activating the timer control:

- Place the appliance in the standby (pilot burner) position using button **↕** (small flame).
- Set the day/night temperature if you have not yet done so; for this, see section 4.2.4.1.
- Set the timer times P1 *** TIMER**, P1 **▷ TIMER**, P2 *** TIMER** and P2 **▷ TIMER**.
- Choose the (**P***) **TIMER** function using the SET button.

4.2.6 Replacing remote control battery

If the battery is almost empty, the display will show "BATT".

To replace the battery, proceed as follows:

- Remove the cover at the back side of the remote control.
- Disconnect the 9V block battery from / connect the 9V block battery to the connector.

- !Caution**
- Observe the "+" and "-" poles of the batteries and the connector;
 - Use alkaline batteries;
 - Batteries are regarded as "small chemical waste" and may therefore not be disposed with the household rubbish.

- Place the battery in the holder.
- Replace the cover.

5. Maintenance

At least once per year, the appliance should be checked for proper and safe operation.



- Caution**
- Your appliance should be maintained by a competent installer in the field of atmospheric gas-fired heating;
 - Have a cracked or broken pane replaced immediately;
 - Do not make any changes to the appliance yourself.

!Caution As user, you are only allowed to clean the appliance on the outside:

- Do not use corrosive detergents;
- Paint damages, resulting from objects fallen/placed against the mantel of the appliance are not covered by the warranty.

6. Environment

6.1 General

Packaging materials must be disposed off in accordance with the regulations.

Batteries are considered as small chemical waste and should be placed in special containers.

6.2 Appliance

When the appliance has reached the end of its life, you should have it processed sensibly, so that the appliance or parts of it can be used again.




- Caution** Take the following steps, prior to removing the appliance:
- First close the gas tap;
 - Then unscrew the coupling between appliance and gas tap.

- Remove the appliance
- Do not place the appliance with unsorted waste, but bring it to a recognized collection point.
- Contact your council for information on available delivery and collection systems.

7. Warranty

The warranty for your DRU appliance will be provided by your supplier. In case of complaints, you must always contact him. Your supplier will contact DRU if he feels this is necessary. The factory warranty is valid for 2 years after date of purchase.

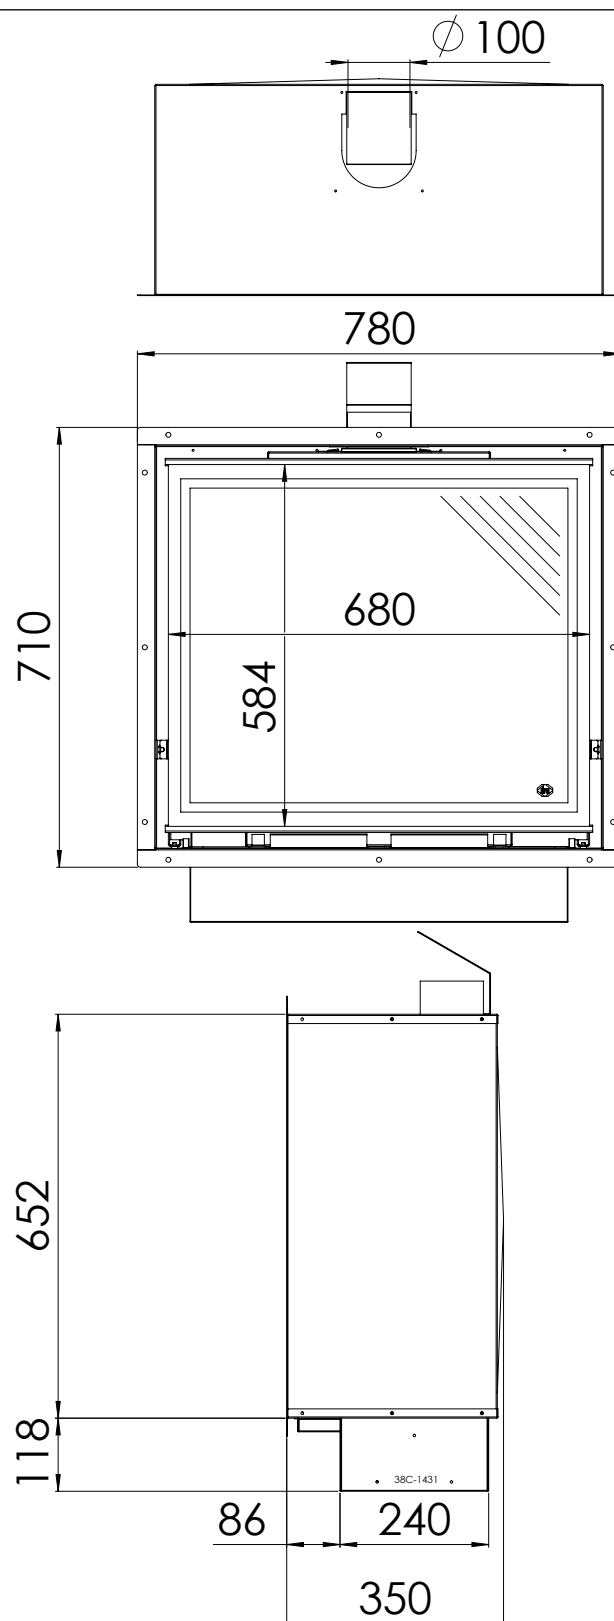

I

